

TEGH MANESH AND SONS CO.

| DRAWING LIST |                                    |              |
|--------------|------------------------------------|--------------|
| DRAWING NO.  | DRAWING DESCRIPTION                | REVISION NO. |
| E-00         | DRAWING LIST                       | 0            |
| E-01         | MCC1 SINGLE LINE DIAGRAM           | 0            |
| E-02         | LARGE EQUIPMENT LAYOUT             | 0            |
| E-03         | HAZARDOUS LOCATION DIAGRAM         | 0            |
| E-04         | MCC1 ELEVATION DRAWING             | 0            |
| E-05         | CABLE TRAY GROUNDING DETAIL        | 0            |
| E-06         | CABLE TRAY LAYOUT                  | 0            |
| E-07         | LEVEL 1 POWER                      | 0            |
| E-08         | PANEL SCHEDULE                     | 0            |
| E-09         | TRANSFORMER AND PANEL INSTALLATION | 0            |
| E-10         | REFLECTED CEILING PLAN             | 0            |
| E-11         | CABLE TRAY BOM                     | 0            |
| E-12         | CABLE SCHEDULE                     | 0            |
| E-13         | MCC SCHEDULE MCC1                  | 0            |

| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-----|
| A          | 10/2/225 | ISSUED FOR 30% PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |
| B          | 11/16/25 | ISSUED FOR 60% PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |
| O          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |

REFERENCE DRAWINGS:

**DRAWING LIST**

| DWN | DGN | CHK | ENG |
|-----|-----|-----|-----|
| UV  | UV  | TM  | TM  |

DRAWING NUMBER:  
**E-00**


ENGINEER'S STAMP



- NOTE:
- 1. INSULATION CLASS FOR ALL MOTORS IS B
  - 2. ALL CONDUCTORS ARE Cu AND RW90
  - 3. POWER CABLES HAVE 1kV INSULATION
  - 4. CONTROL CABLES HAVE 0.6kV INSULATION
  - 5. CPTs TURN 480V PRI. TO 120V SEC.

CONTINUED ON SHEET 1

CONTINUED ON SHEET 3

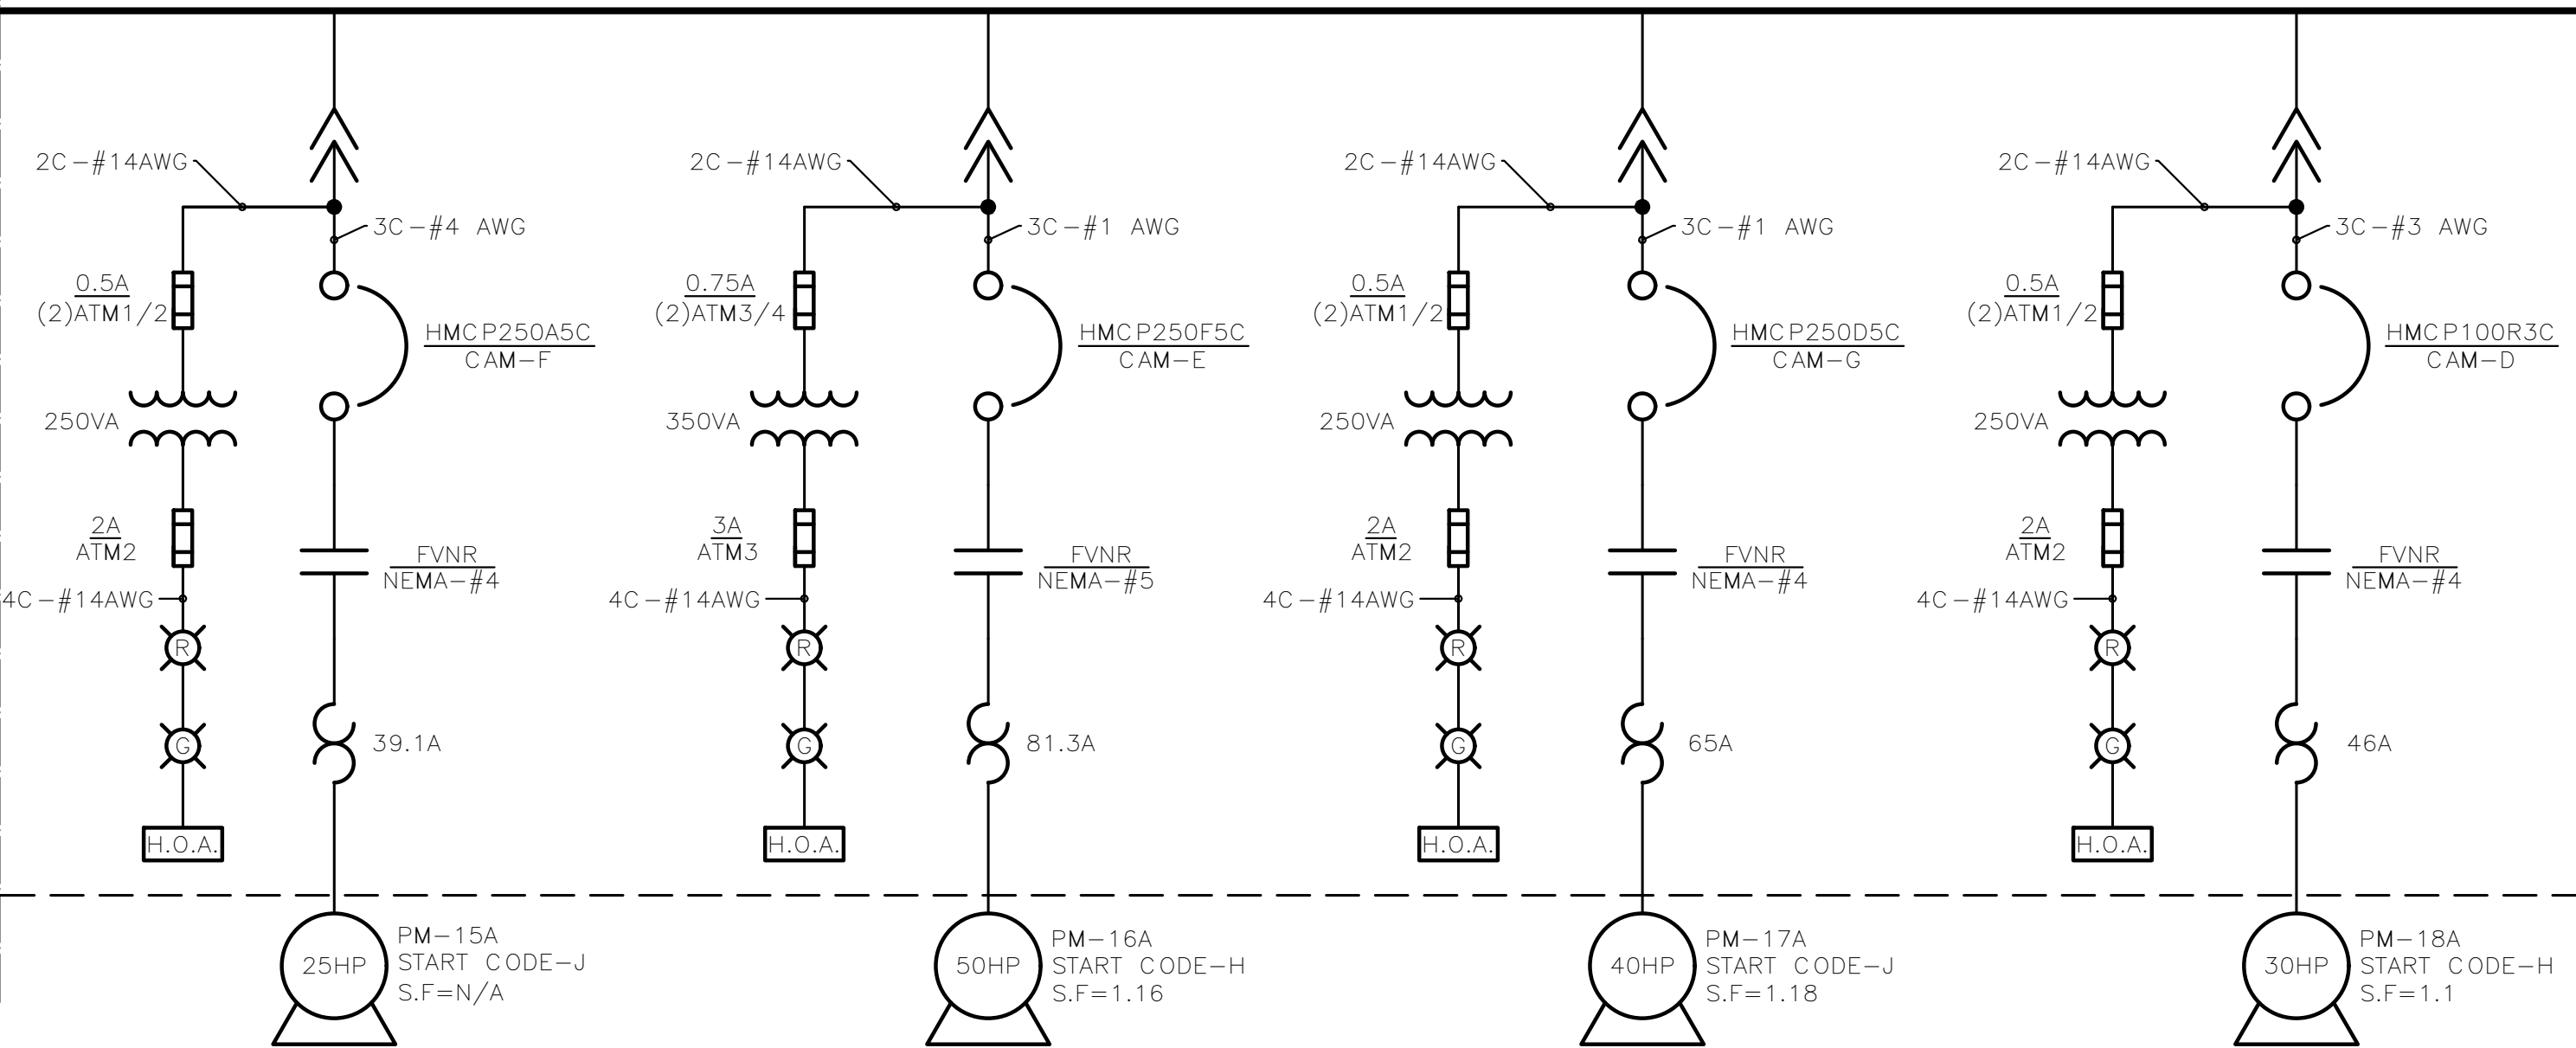

| REV NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG |
|---------|----------|------------------------|-----|-----|-----|-----|
| A       | 10/2/225 | ISSUED FOR 30% PACKAGE | UV  | UV  | TM  | TM  |
| B       | 11/16/25 | ISSUED FOR 60% PACKAGE | UV  | UV  | TM  | TM  |
| 0       | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |
|         |          |                        |     |     |     |     |
|         |          |                        |     |     |     |     |

| REV NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG |
|---------|------|----------------------|-----|-----|-----|-----|
|         |      |                      |     |     |     |     |
|         |      |                      |     |     |     |     |
|         |      |                      |     |     |     |     |
|         |      |                      |     |     |     |     |
|         |      |                      |     |     |     |     |


| REFERENCE DRAWINGS:                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>E-13 MCC SCHEDULE MCC1</li><li>E-04 MCC1 ELEVATION DRAWING</li><li>E-02 LARGE EQUIPMENT LAYOUT</li></ul> |

| ENGINEER'S STAMP |
|------------------|
|                  |


| MCC1 SINGLE LINE DIAGRAM |     |     |     |
|--------------------------|-----|-----|-----|
| DWN                      | DGN | CHK | ENG |
| UV                       | UV  | TM  | TM  |
| DRAWING NUMBER: E-01     |     |     |     |

- NOTE:
- 1. INSULATION CLASS FOR ALL MOTORS IS B
  - 2. ALL CONDUCTORS ARE Cu AND RW90
  - 3. POWER CABLES HAVE 1kV INSULATION
  - 4. CONTROL CABLES HAVE 0.6kV INSULATION
  - 5. CPTs TURN 480V PRI. TO 120V SEC.


CONTINUED ON SHEET 2

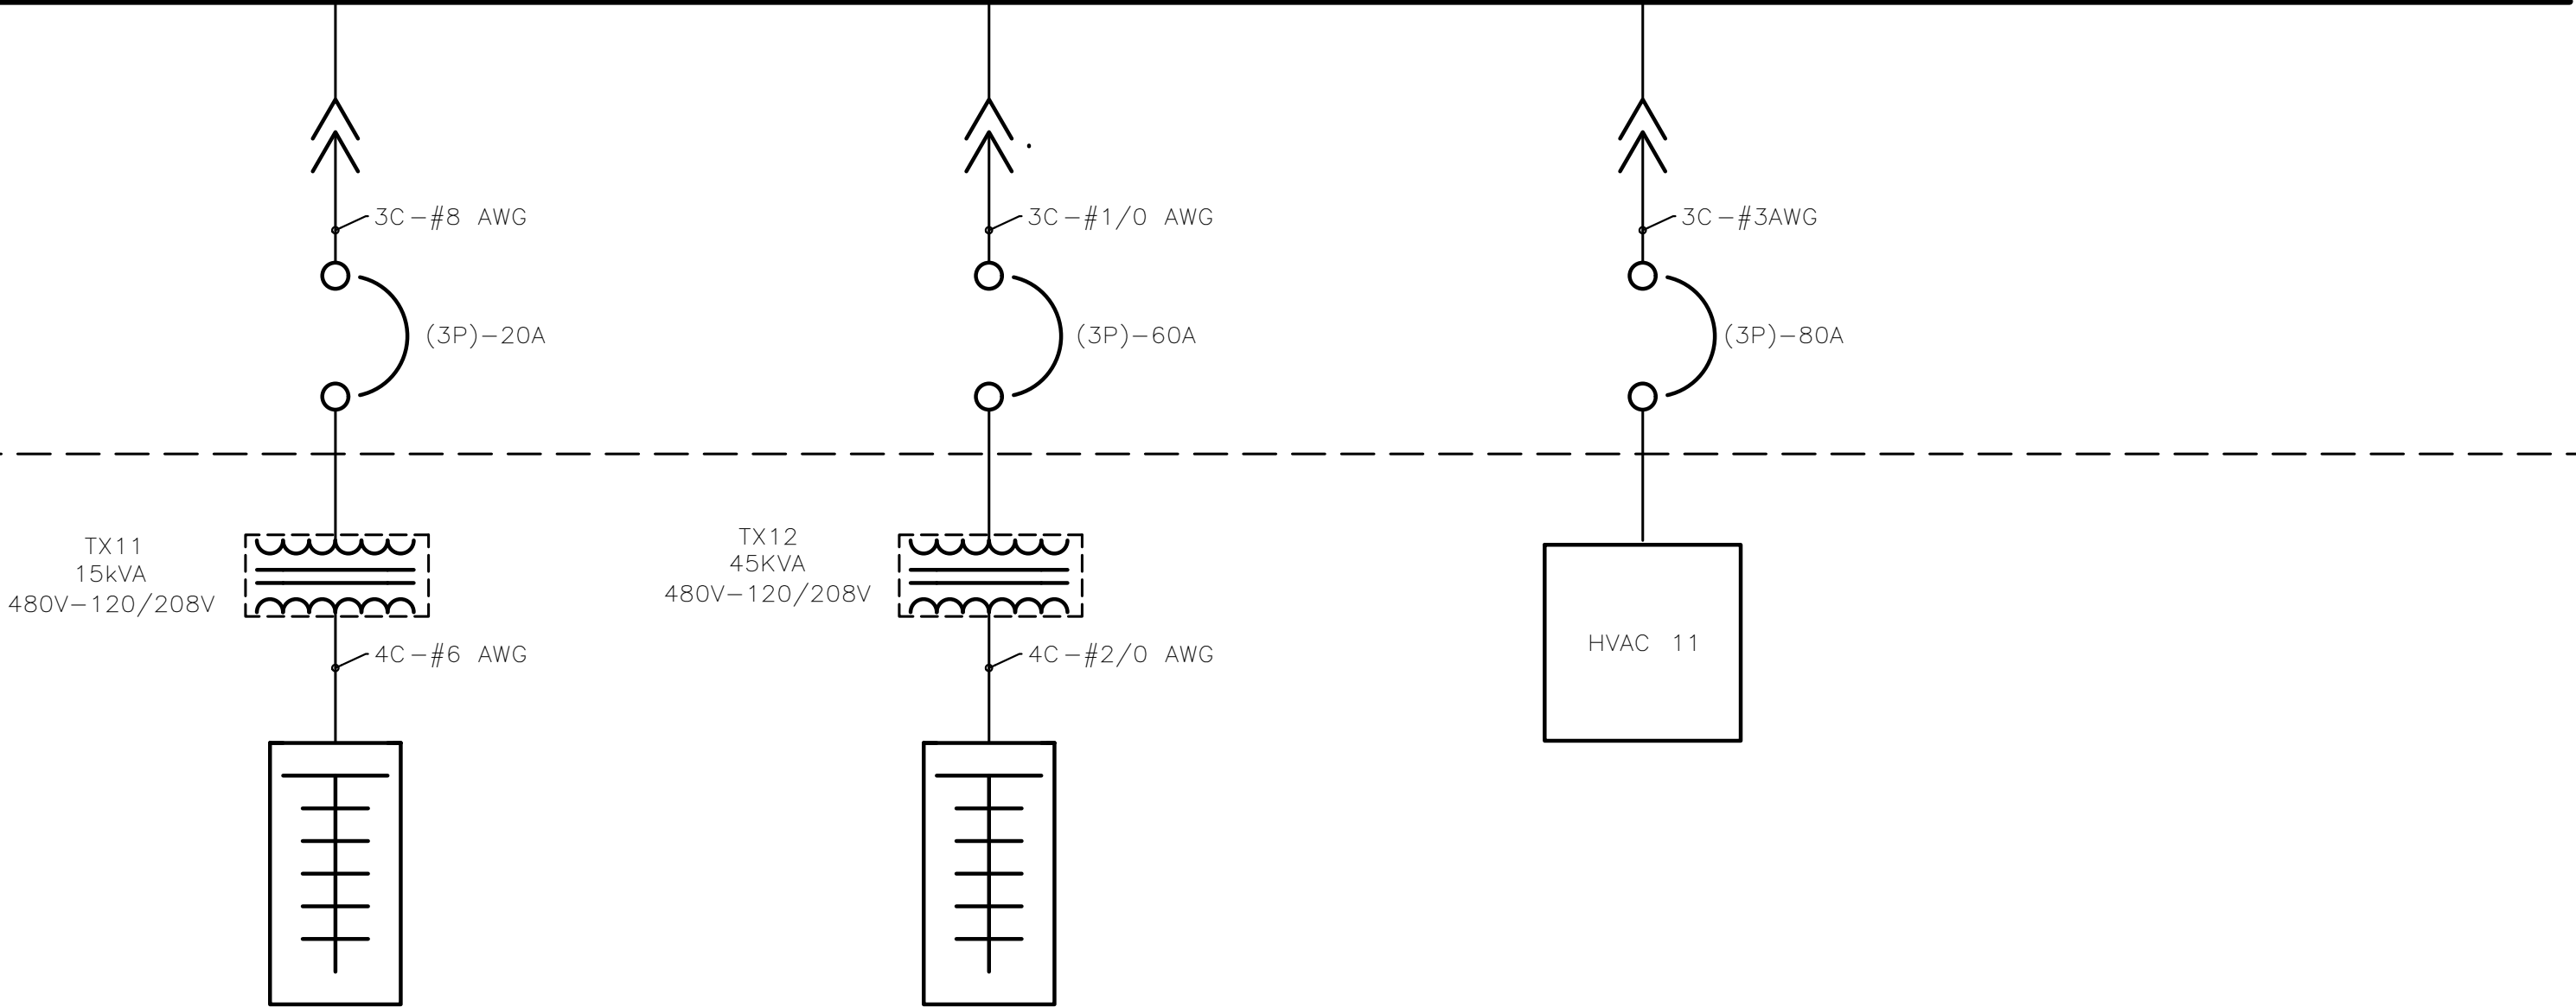

| REV NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS: <ul style="list-style-type: none"><li>E-13 MCC SCHEDULE MCC1</li><li>E-04 MCC1 ELEVATION DRAWING</li><li>E-02 LARGE EQUIPMENT LAYOUT</li></ul> | ENGINEER'S STAMP | MCC1 SINGLE LINE DIAGRAM |     |     |     |
|---------|----------|------------------------|-----|-----|-----|-----|---------|------|----------------------|-----|-----|-----|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|--------------------------|-----|-----|-----|
| A       | 10/2/25  | ISSUED FOR 30% PACKAGE | UV  | UV  | TM  | TM  |         |      |                      |     |     |     |     |                                                                                                                                                                    |                  | DWN                      | DGN | CHK | ENG |
| B       | 11/16/25 | ISSUED FOR 60% PACKAGE | UV  | UV  | TM  | TM  |         |      |                      |     |     |     |     |                                                                                                                                                                    |                  | UV                       | UV  | TM  | TM  |
| 0       | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |         |      |                      |     |     |     |     |                                                                                                                                                                    |                  | DRAWING NUMBER: E-01     |     |     |     |
|         |          |                        |     |     |     |     |         |      |                      |     |     |     |     |                                                                                                                                                                    |                  |                          |     |     |     |
|         |          |                        |     |     |     |     |         |      |                      |     |     |     |     |                                                                                                                                                                    |                  |                          |     |     |     |

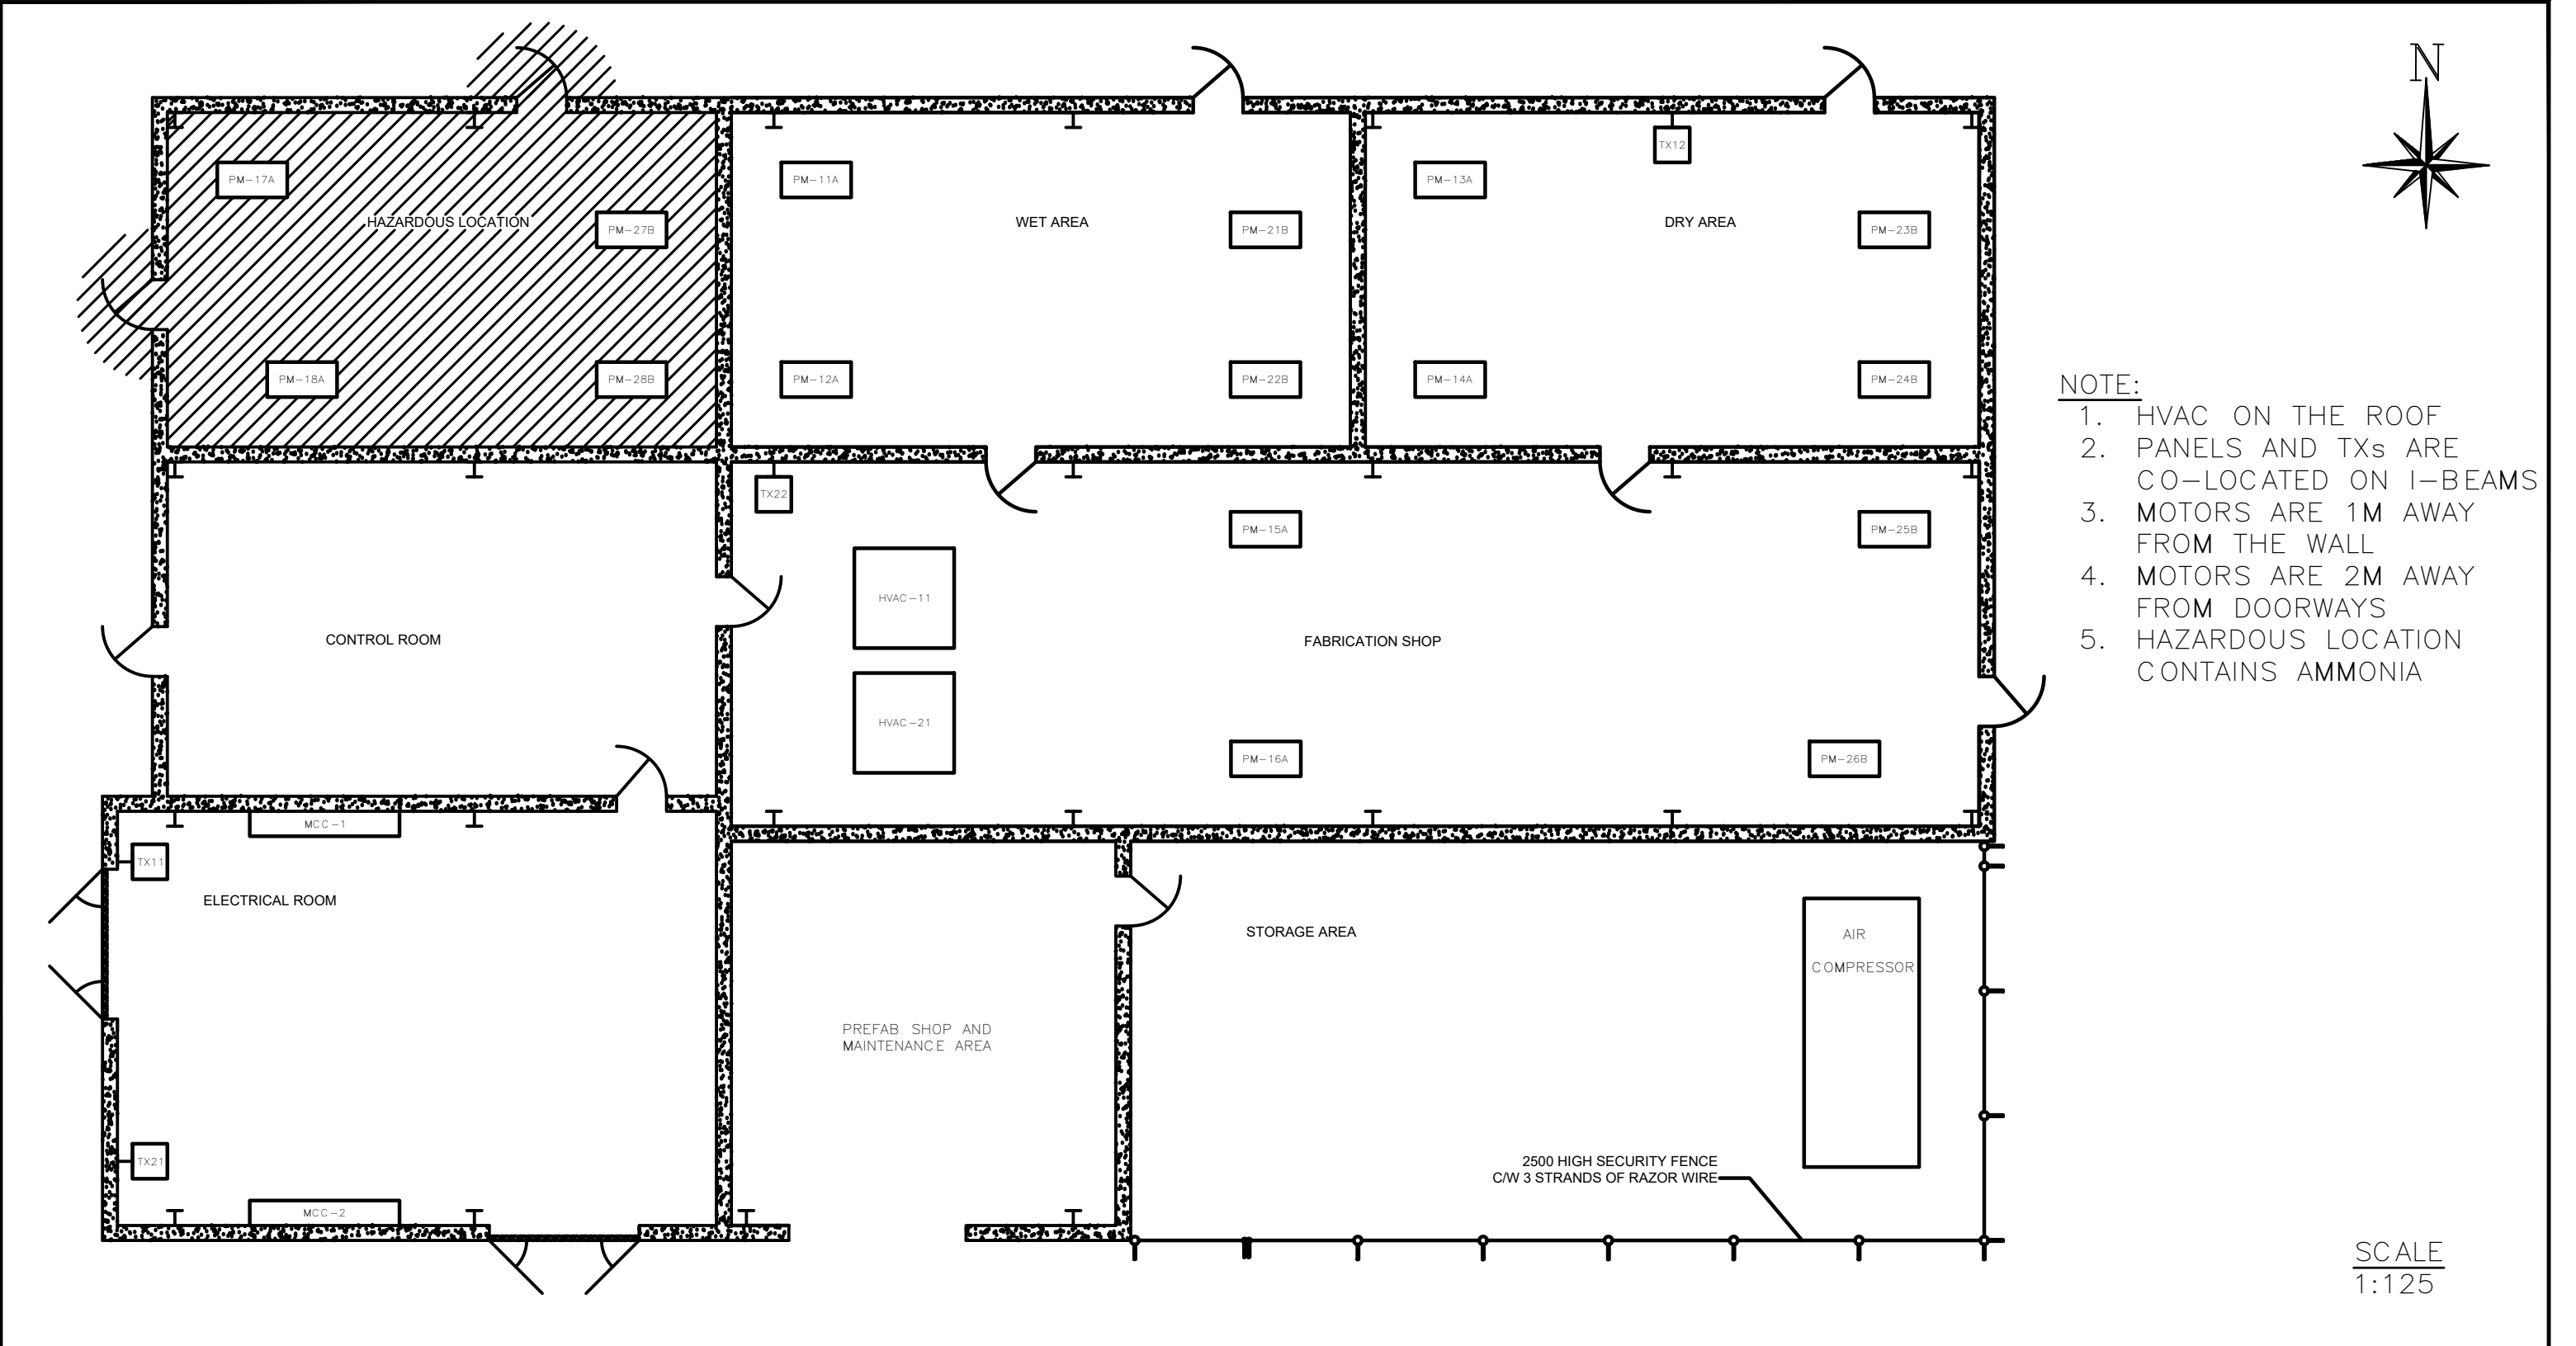

| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG                     | REFERENCE DRAWINGS: <ul style="list-style-type: none"><li>E-03 HAZARDOUS LOCATION DIAGRAM</li><li>E-13 MCC SCHEDULE MCC1</li></ul> | ENGINEER'S STAMP | LARGE EQUIPMENT LAYOUT |     |     |  |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-------------------------|------------------------------------------------------------------------------------------------------------------------------------|------------------|------------------------|-----|-----|--|
| A          | 10/2/225 | ISSUED FOR 30% PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     | DWN                     |                                                                                                                                    |                  | DGN                    | CHK | ENG |  |
| O          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     | UV                      |                                                                                                                                    |                  | UV                     | TM  | TM  |  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     | DRAWING NUMBER:<br>E-02 |                                                                                                                                    |                  |                        |     |     |  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |                         |                                                                                                                                    |                  |                        |     |     |  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |                         |                                                                                                                                    |                  |                        |     |     |  |

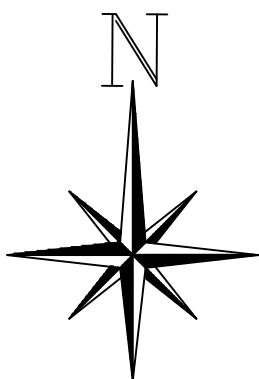


SCALE  
1:45


- NOTE:
- 1. ZONE 2
  - 2. HAZARDOUS LOCATION CONTAINS AMMONIA
  - 3. A.I.T. IS 630°C
  - 4. GROUP IIA
  - 5. VAPOR DENSITY = 0.59
  - 6. 1.5M FROM ENTRY WAY




ZONE 2  
HATCHING

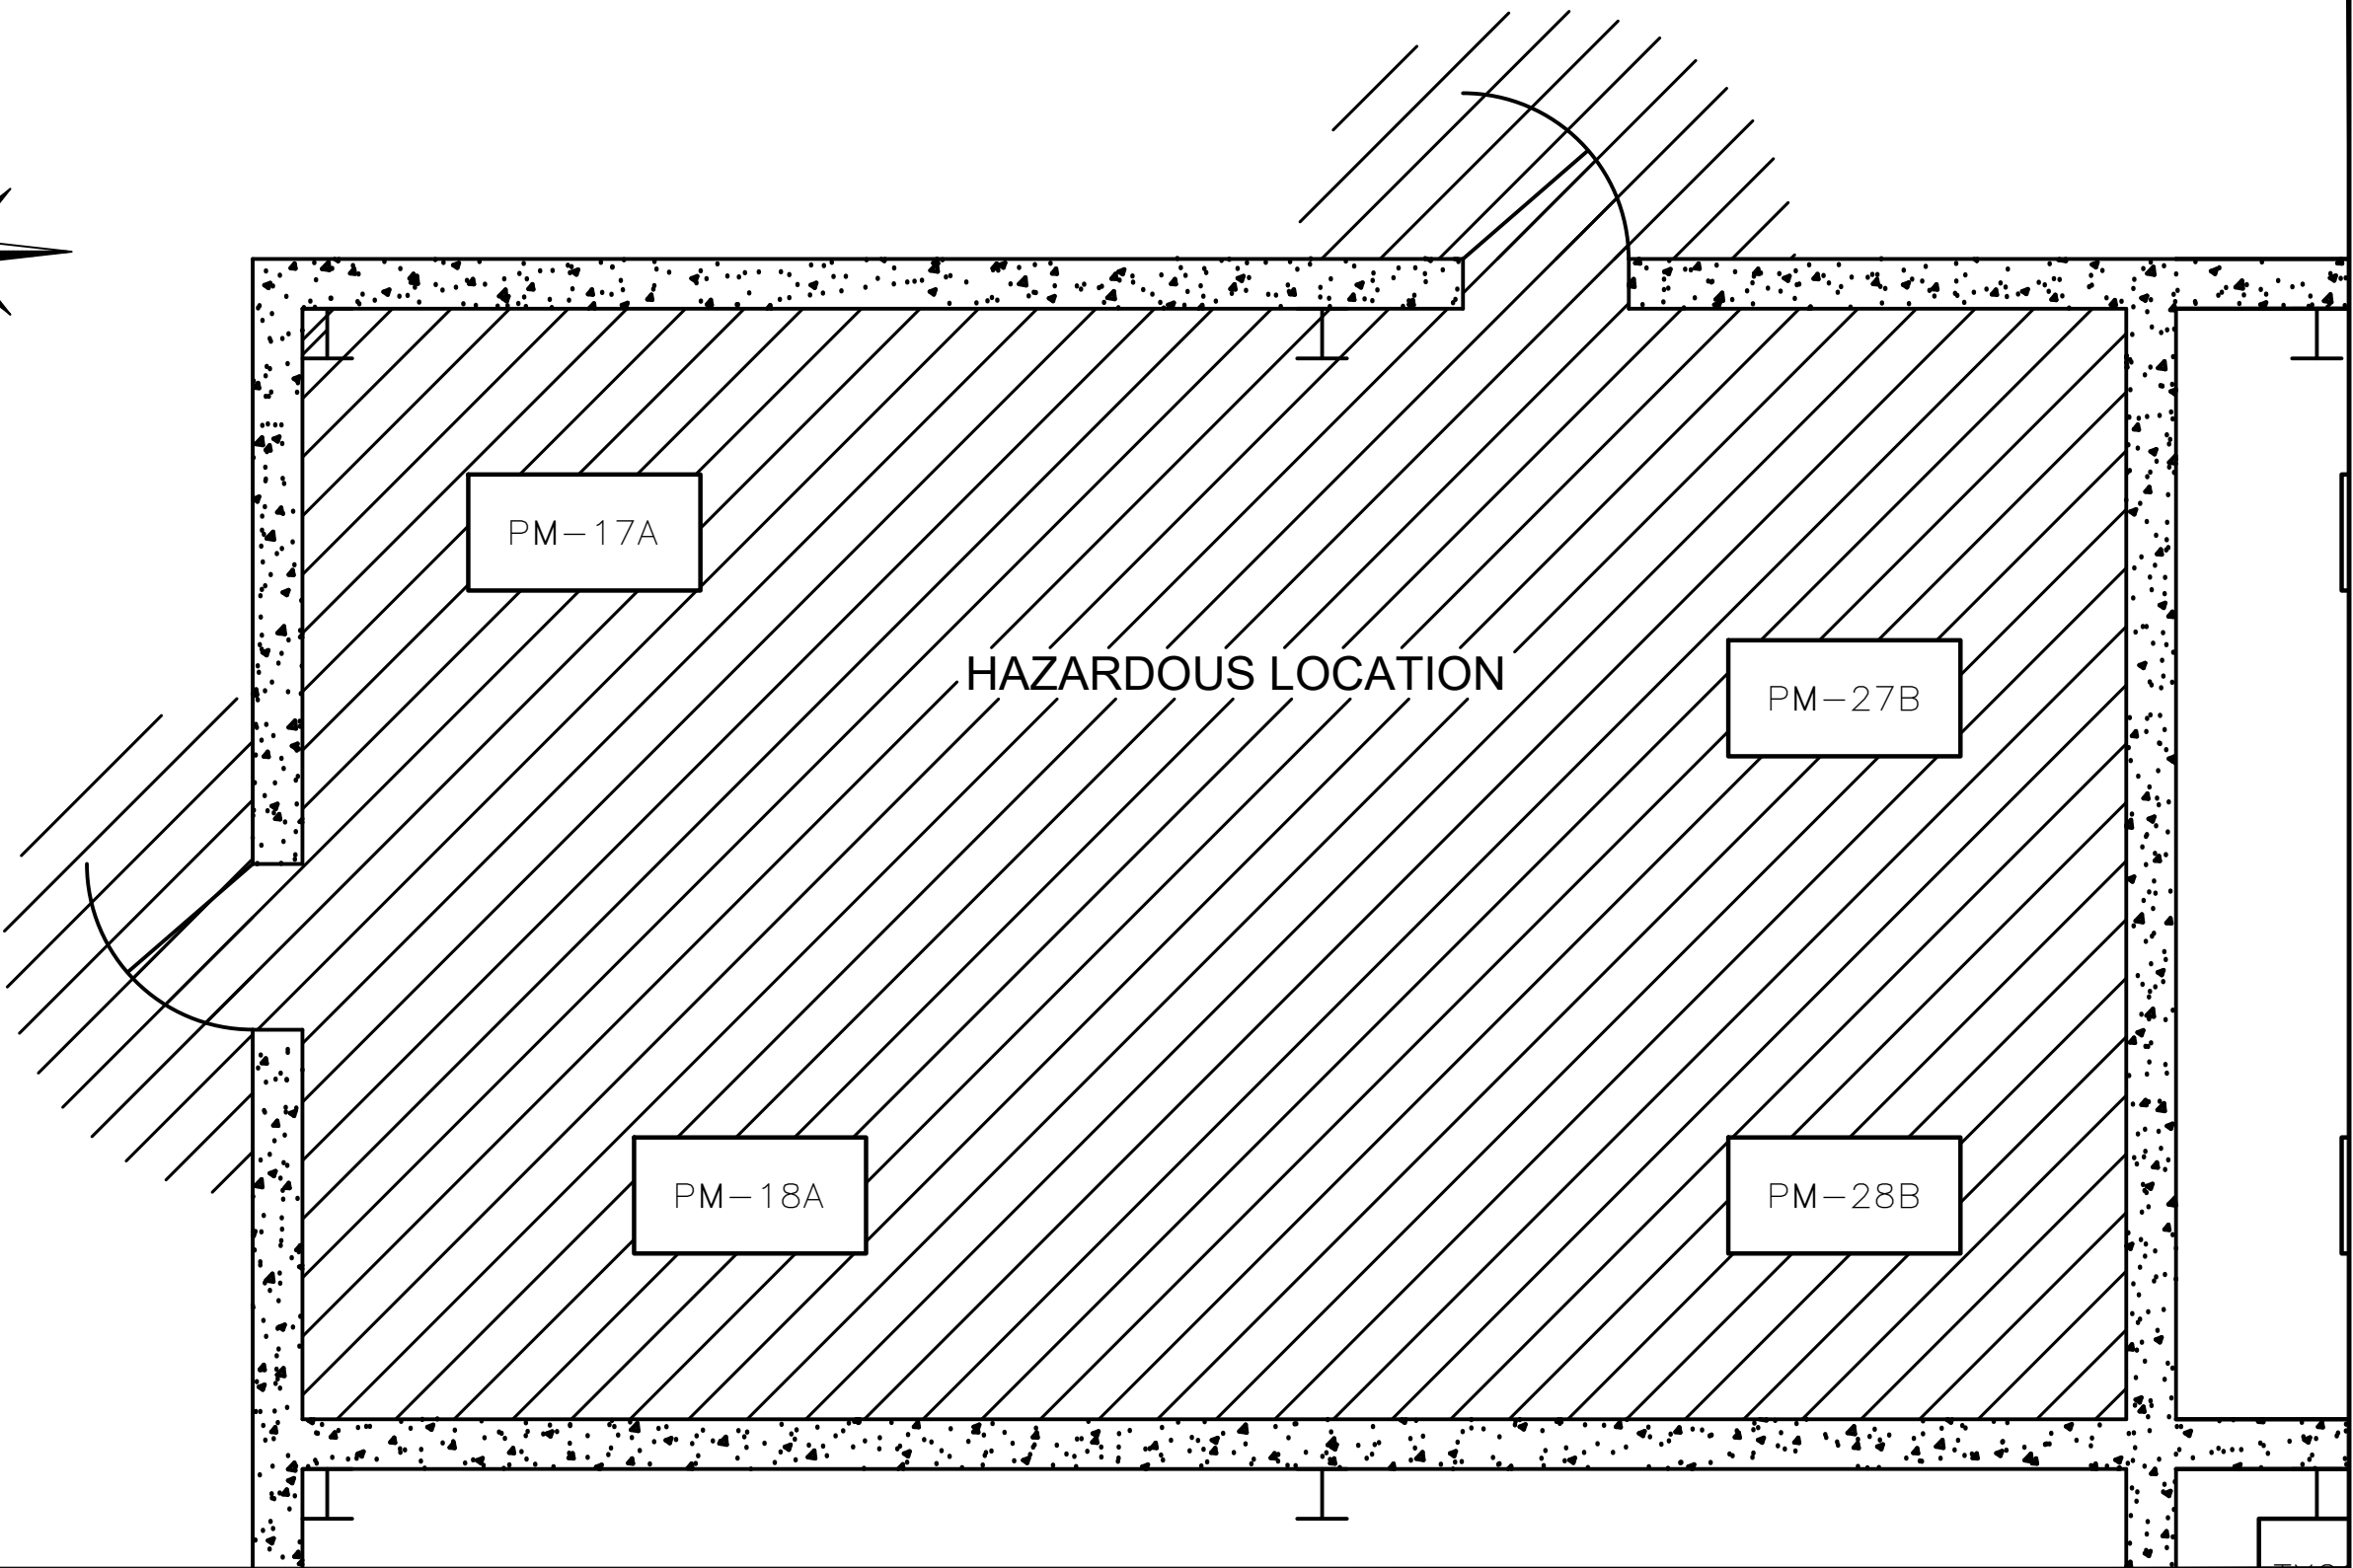


| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS:<br>1. E-02 LARGE EQUIPMENT LAYOUT | ENGINEER'S STAMP | HAZARDOUS LOCATION DIAGRAM |                         |     |     |     |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-----|-------------------------------------------------------|------------------|----------------------------|-------------------------|-----|-----|-----|
| A          | 11/16/25 | ISSUED FOR 60% PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |                                                       |                  |                            | DWN                     | DGN | CHK | ENG |
| 0          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |                                                       |                  |                            | UV                      | UV  | TM  | TM  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                       |                  |                            | DRAWING NUMBER:<br>E-03 |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                       |                  |                            |                         |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                       |                  |                            |                         |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                       |                  |                            |                         |     |     |     |

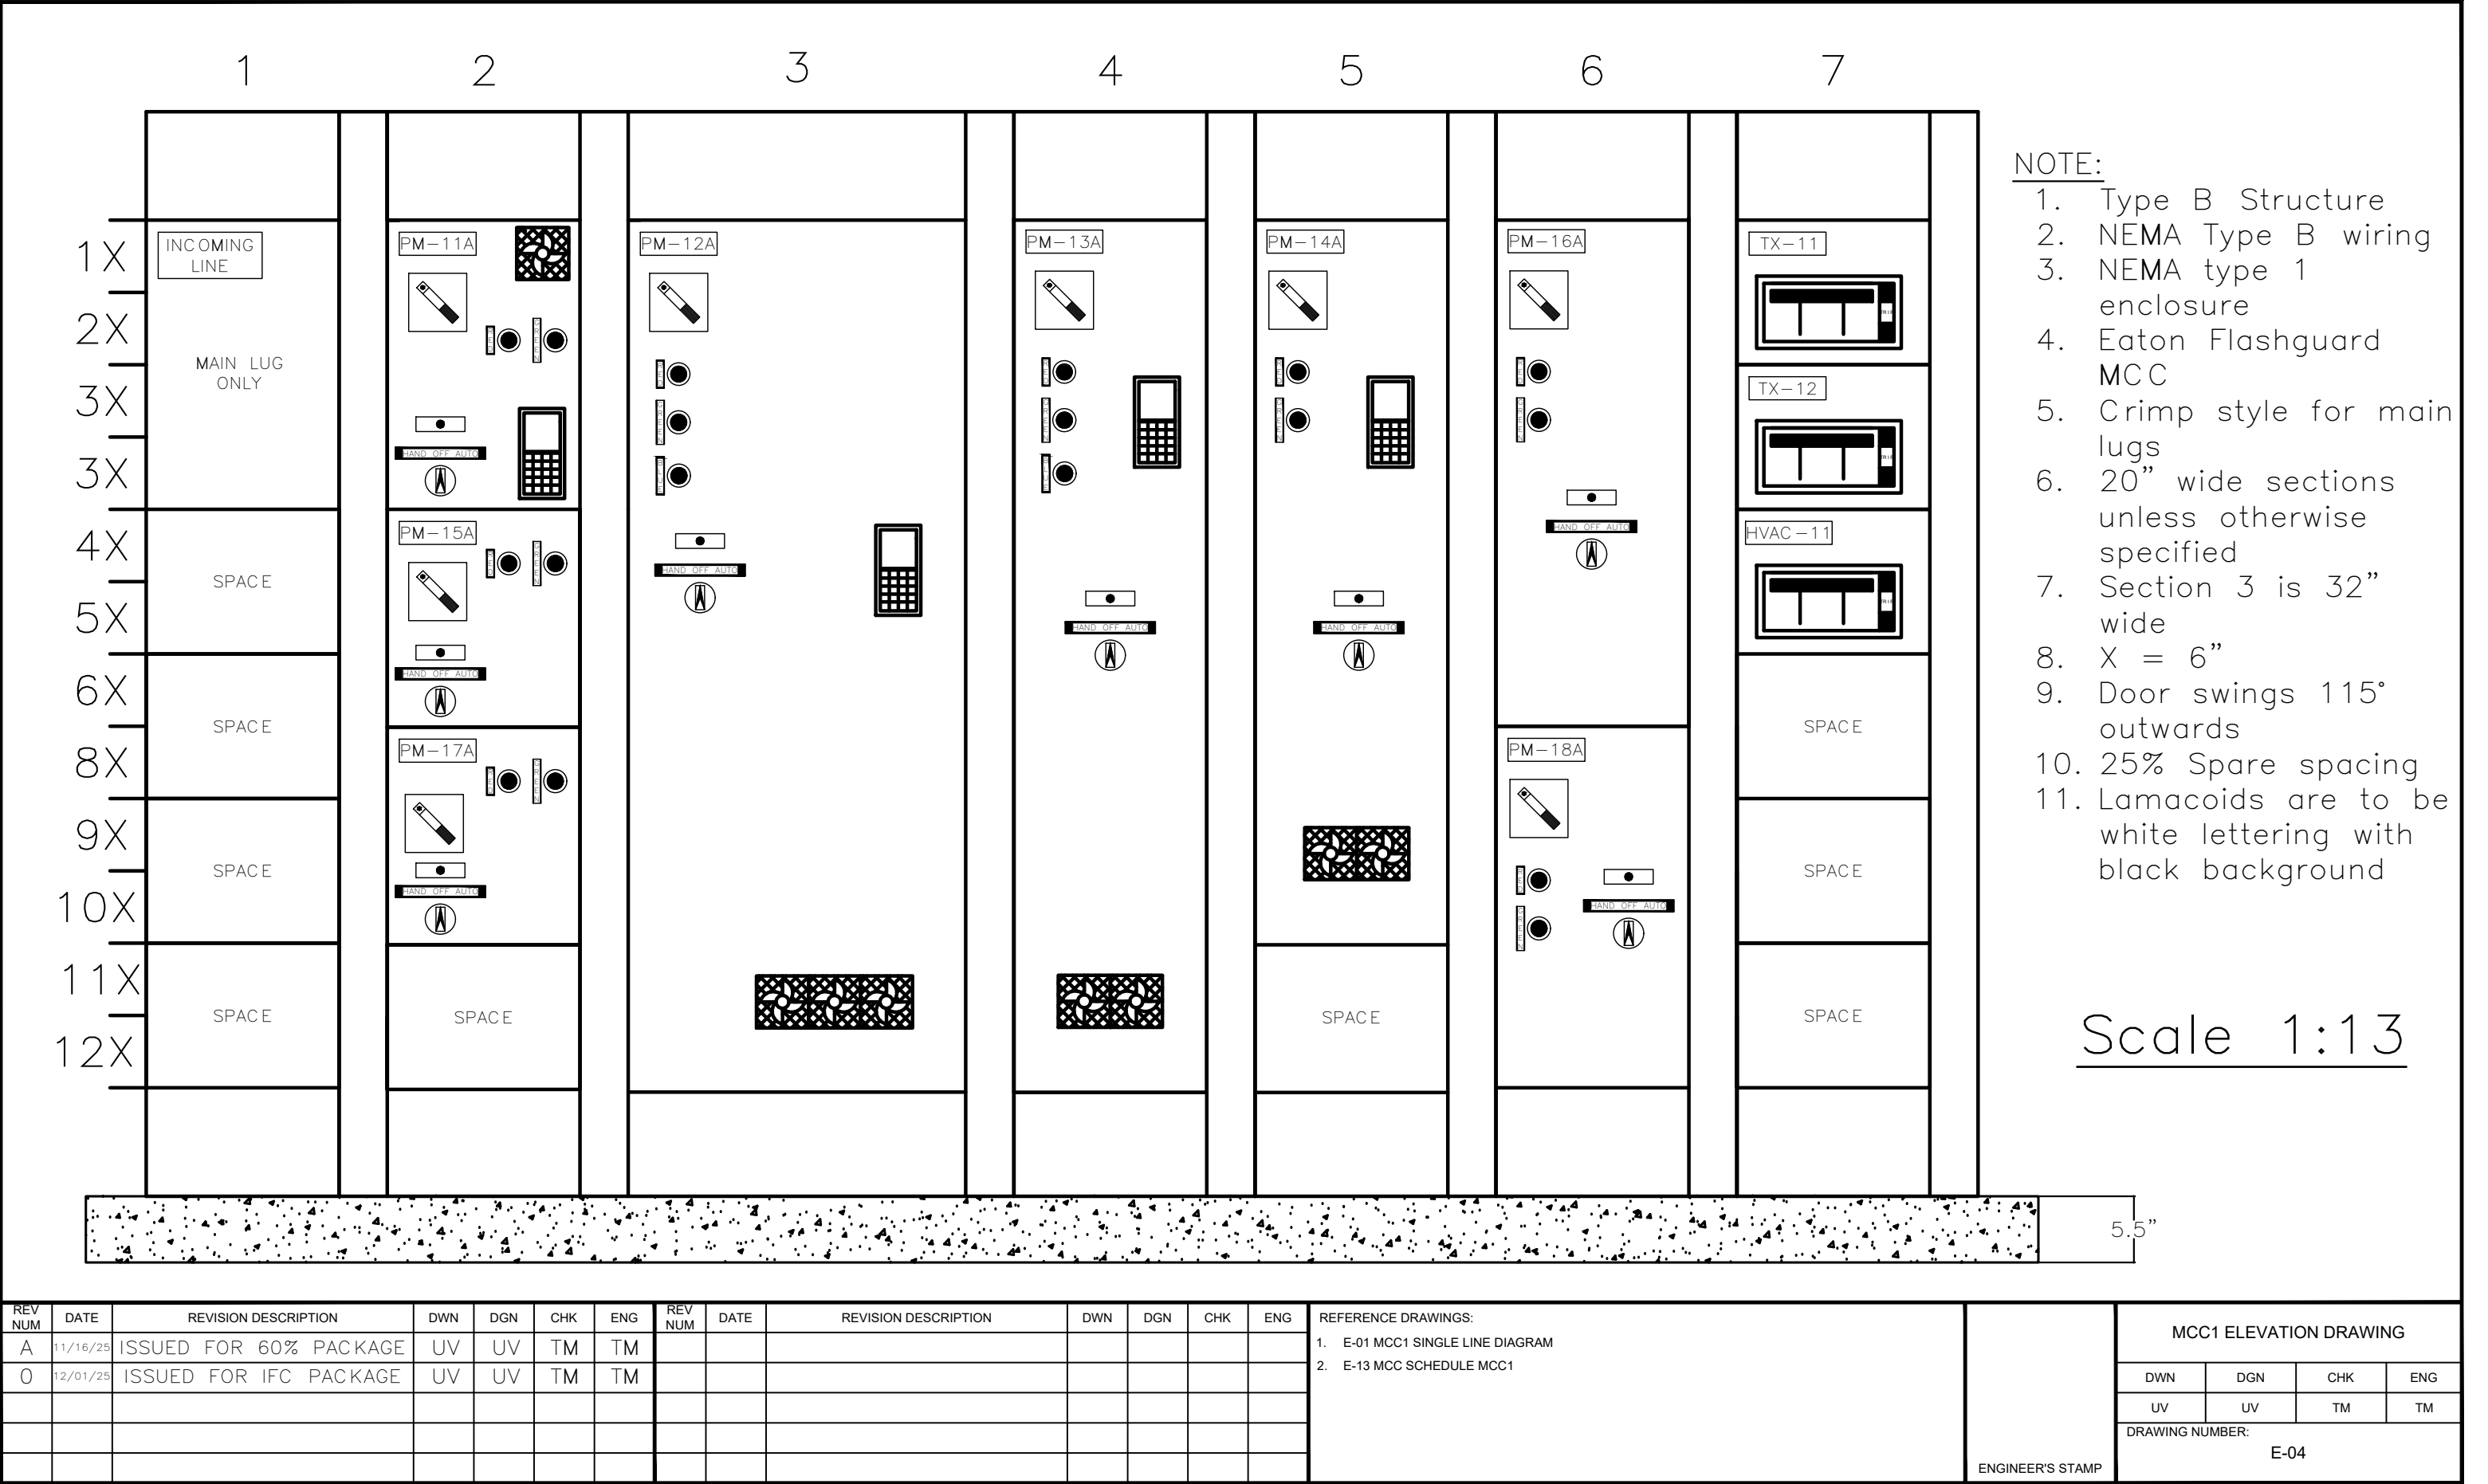

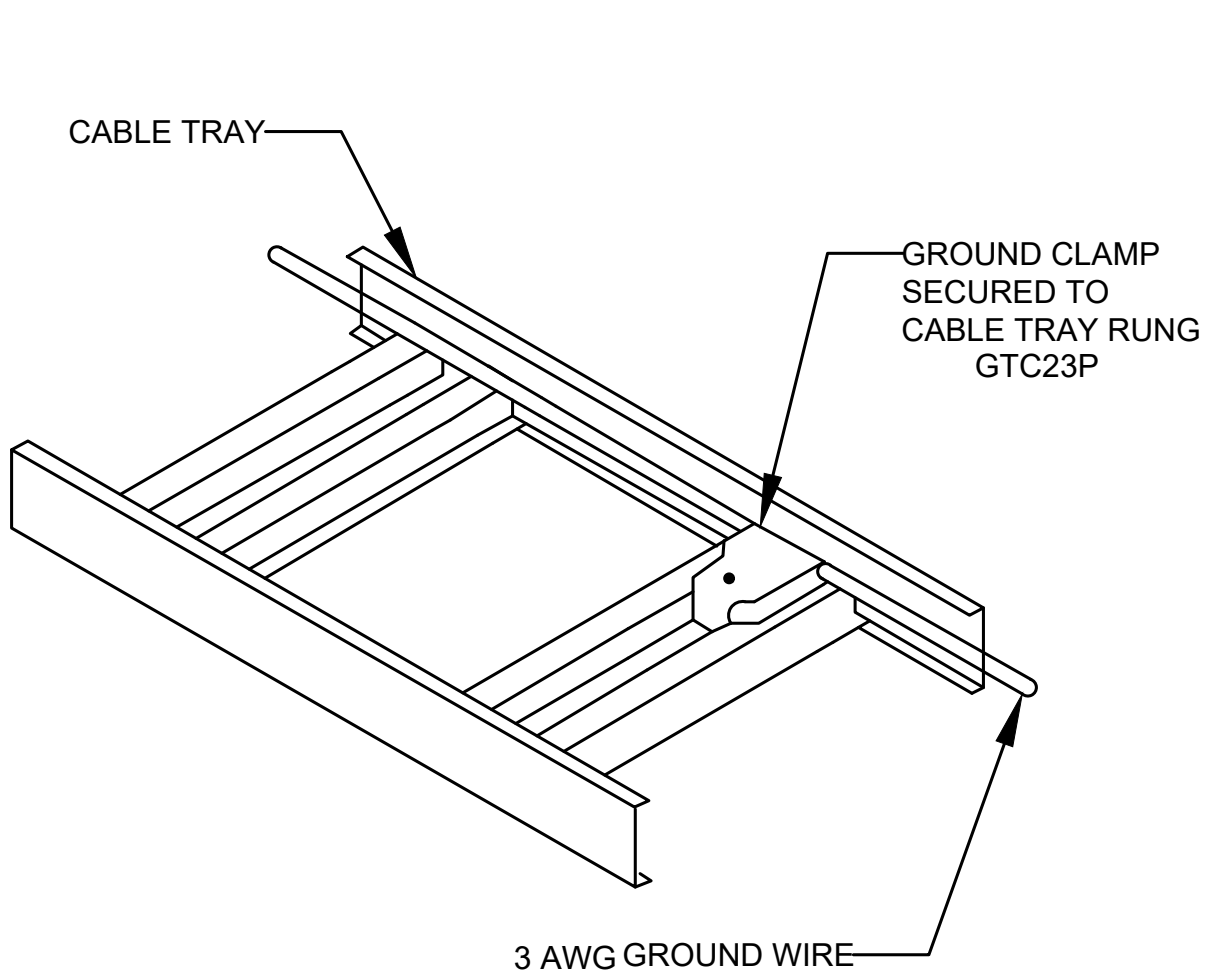

CABLE TRAY GROUND CLAMP

DETAIL 1  
N.T.S. S

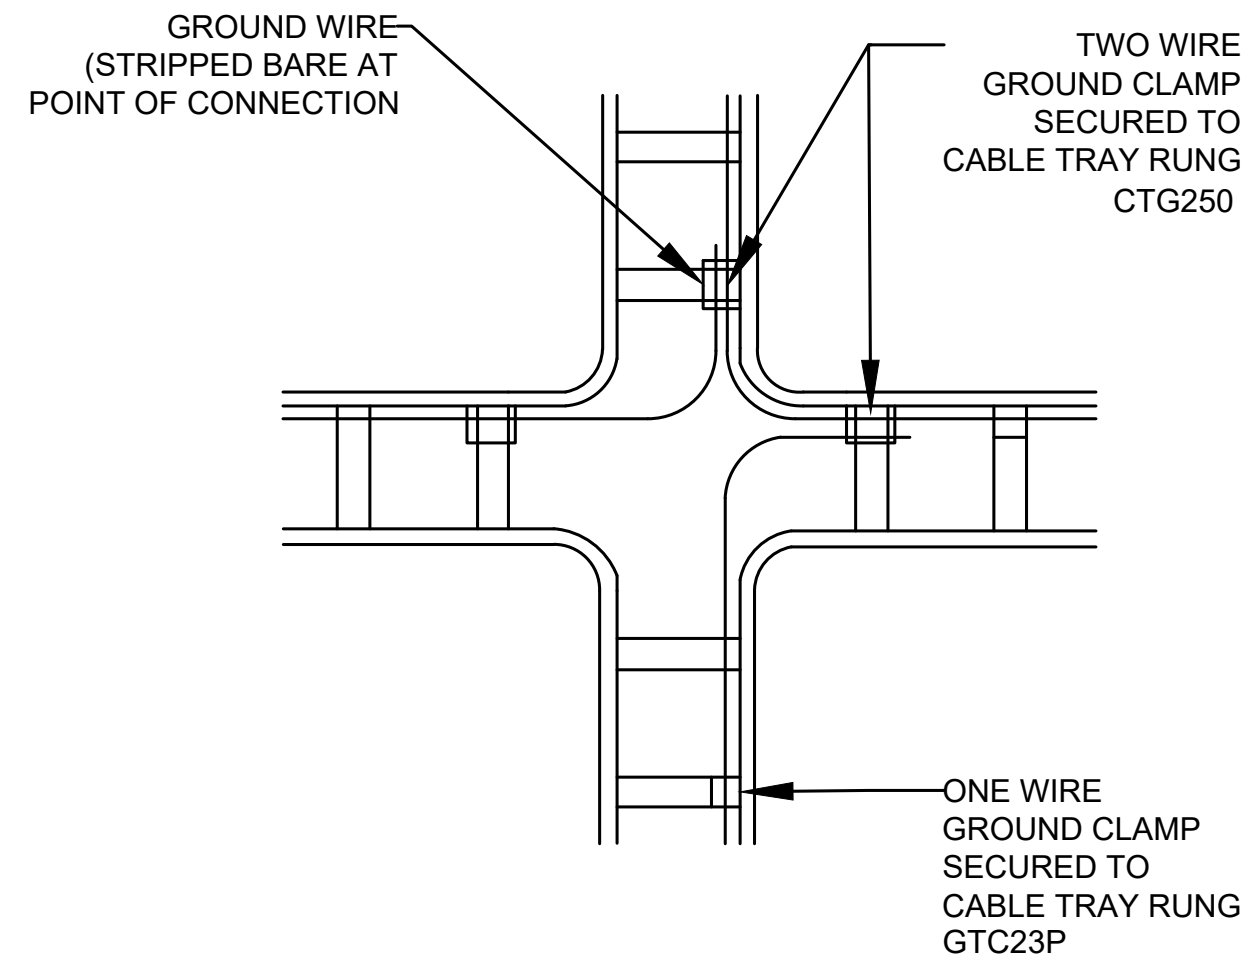

TRAY TEE CONNECTION GROUNDING

DETAIL 2  
N.T.S. S

| REV NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS: | ENGINEER'S STAMP | CABLE TRAY GROUNDING DETAIL |     |     |     |
|---------|----------|------------------------|-----|-----|-----|-----|---------|------|----------------------|-----|-----|-----|-----|---------------------|------------------|-----------------------------|-----|-----|-----|
| A       | 11/16/25 | ISSUED FOR 60% PACKAGE | UV  | UV  | TM  | TM  |         |      |                      |     |     |     |     |                     |                  | DWN                         | DGN | CHK | ENG |
| 0       | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |         |      |                      |     |     |     |     |                     |                  | UV                          | UV  | TM  | TM  |
|         |          |                        |     |     |     |     |         |      |                      |     |     |     |     |                     |                  | DRAWING NUMBER:             |     |     |     |
|         |          |                        |     |     |     |     |         |      |                      |     |     |     |     |                     |                  | E-05                        |     |     |     |




1. EXPANSION PLATES  
MUST BE PLACED  
EVERY 19 METERS
2. STAINLESS STEEL  
CABLE TRAY


- E-11 CABLE TRAY BOM
- E-05 CABLE TRAY GROUNDING DETAIL

[illegible]

## CABLE TRAY LAYOUT

|                |               |
|----------------|---------------|
| Project Number | 67            |
| Date           | 12/01/2025    |
| Drawn By       | YUVRAJ GREWAL |
| Checked By     | TEGH MANESH   |

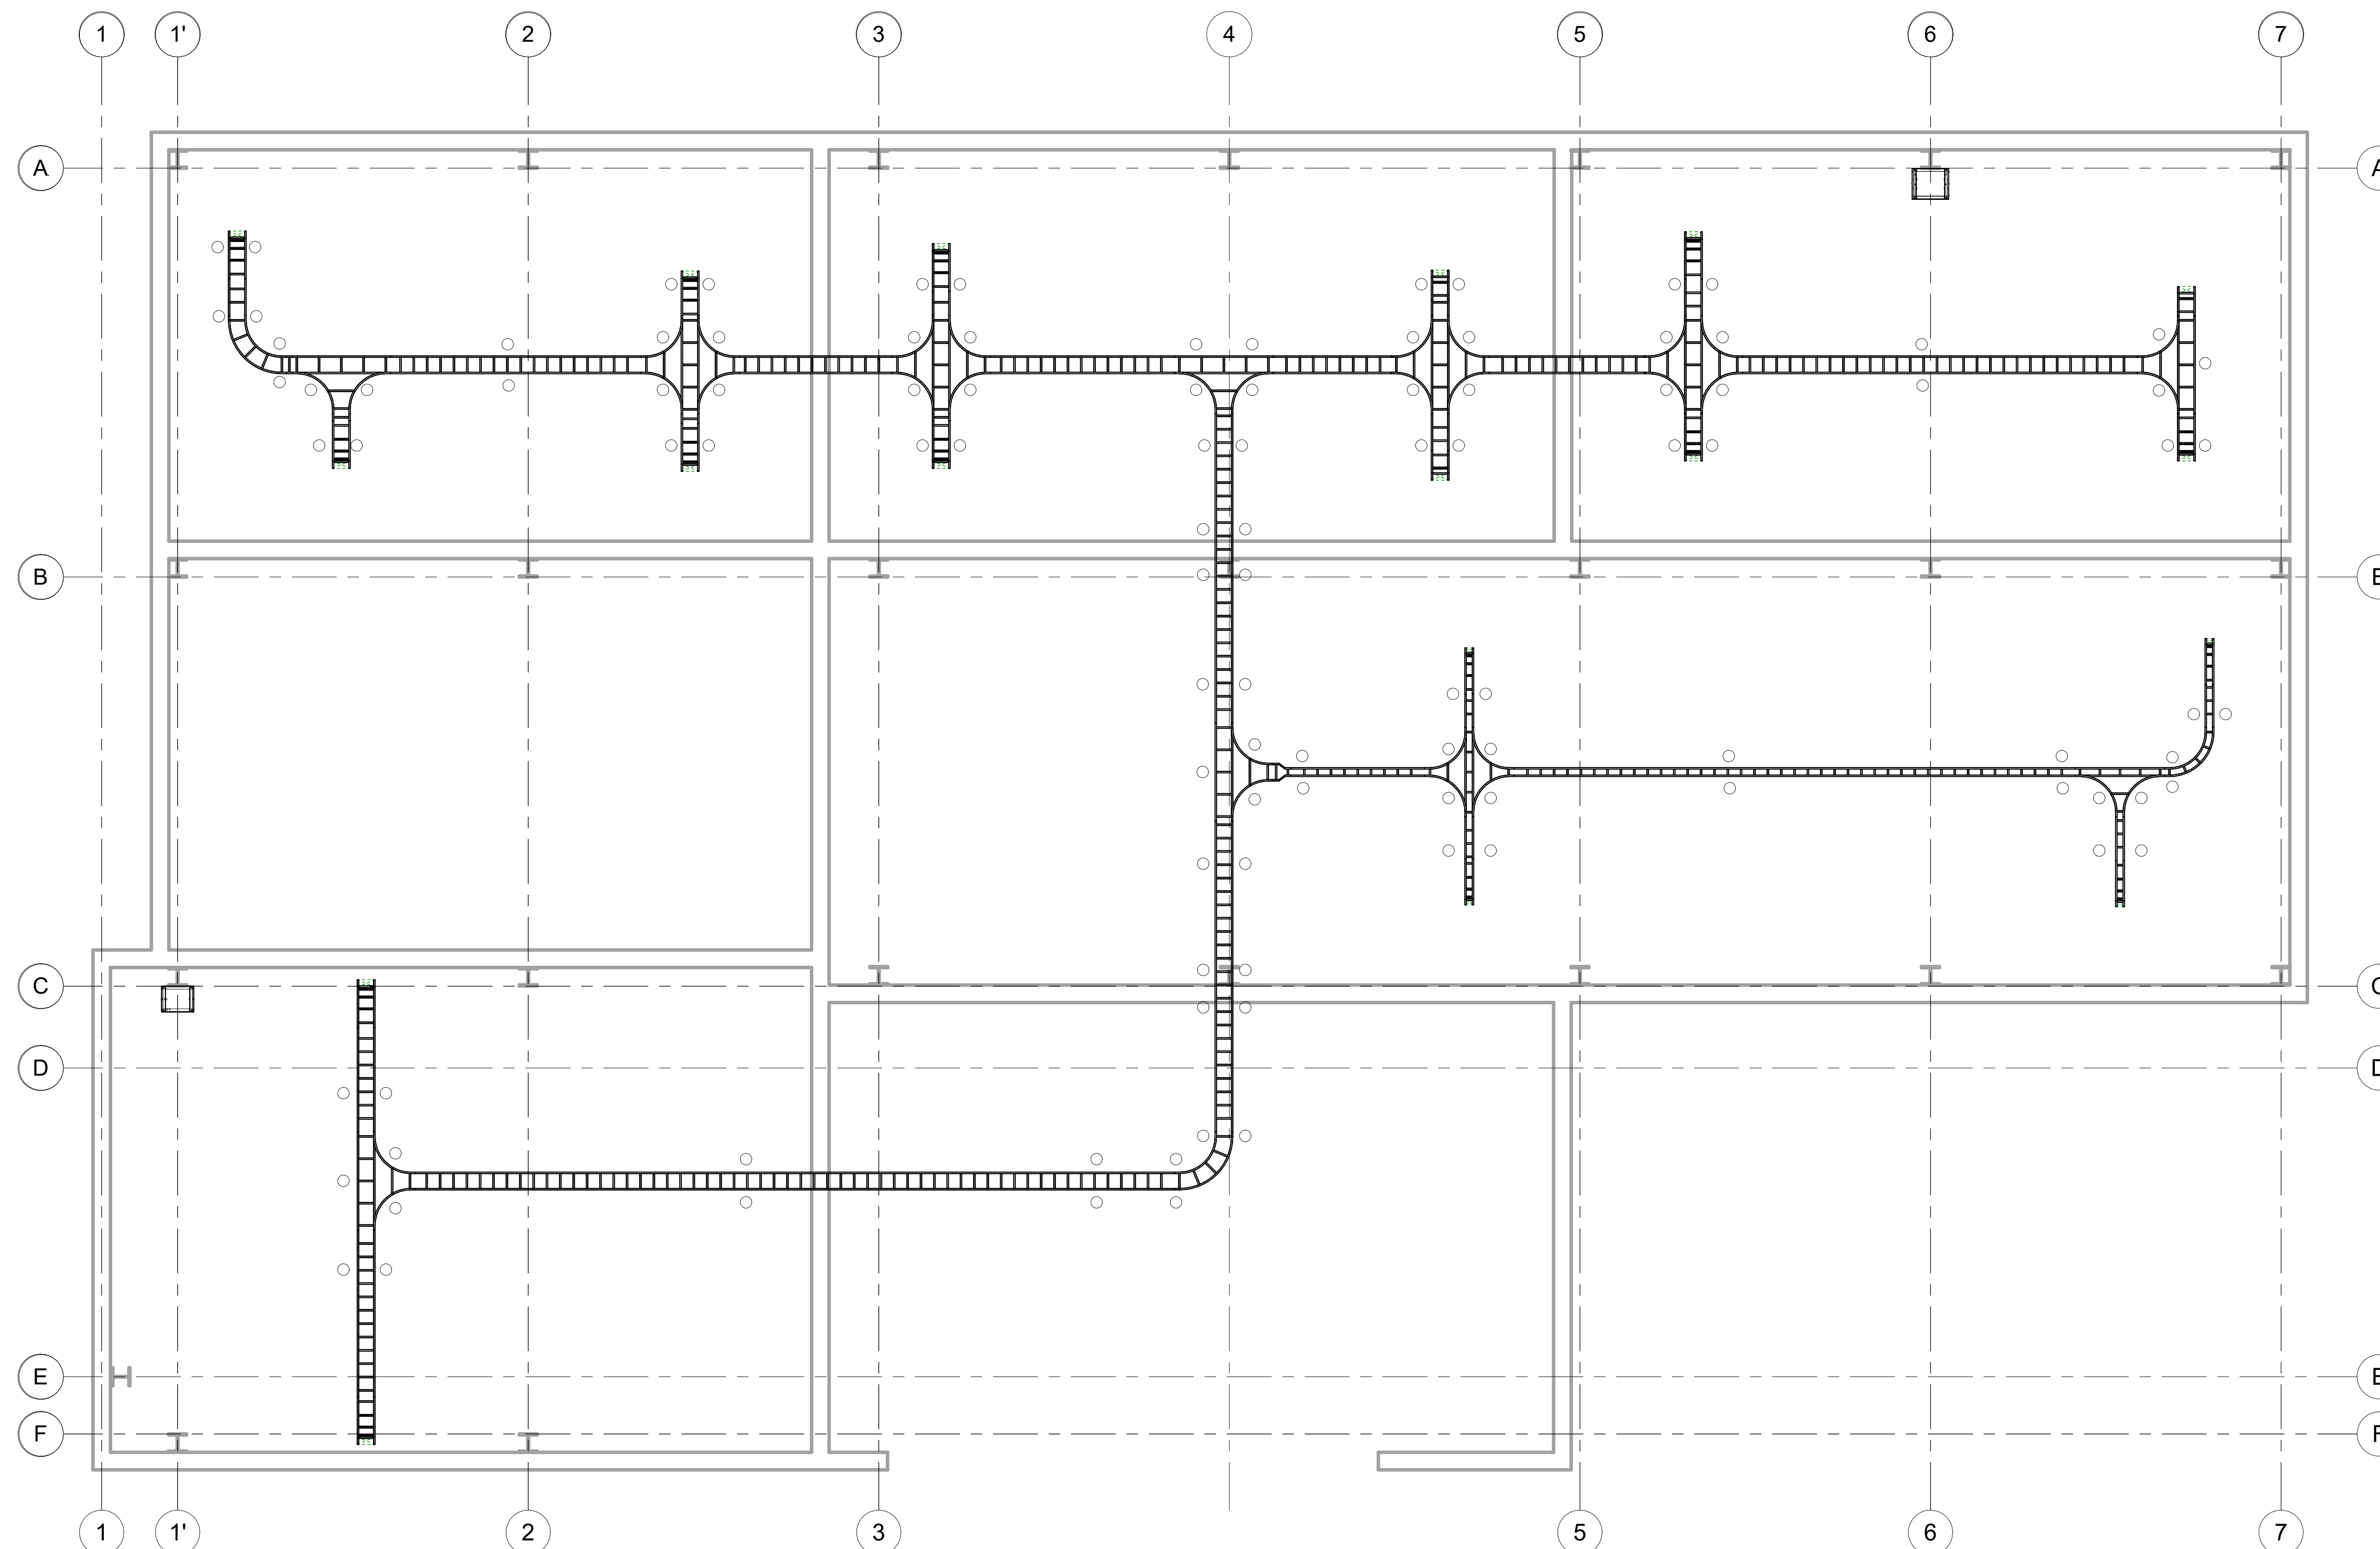



1. ALL RECEPTACLES IN THE HAZARDOUS AND WET AREA ARE GFCI
2. EACH ROOM HAS AT LEAST ONE DEDICATED RECEPTACLE

- E-03 LARGE EQUIPMENT LAYOUT
- E-09 TRANSFORMER AND PANEL INSTALLATION
- E-08 PANEL SCHEDULE

[illegible]

## UVs PLAYHOUSE


## LEVEL 1 POWER

|                |               |
|----------------|---------------|
| Project Number | 67            |
| Date           | 12/01/2025    |
| Drawn By       | YUVRAJ GREWAL |
| Checked By     | TEGH MANESH   |

E-07

Scale 1 : 60

|       |        |
|-------|--------|
| Scale | 1 : 60 |
|-------|--------|

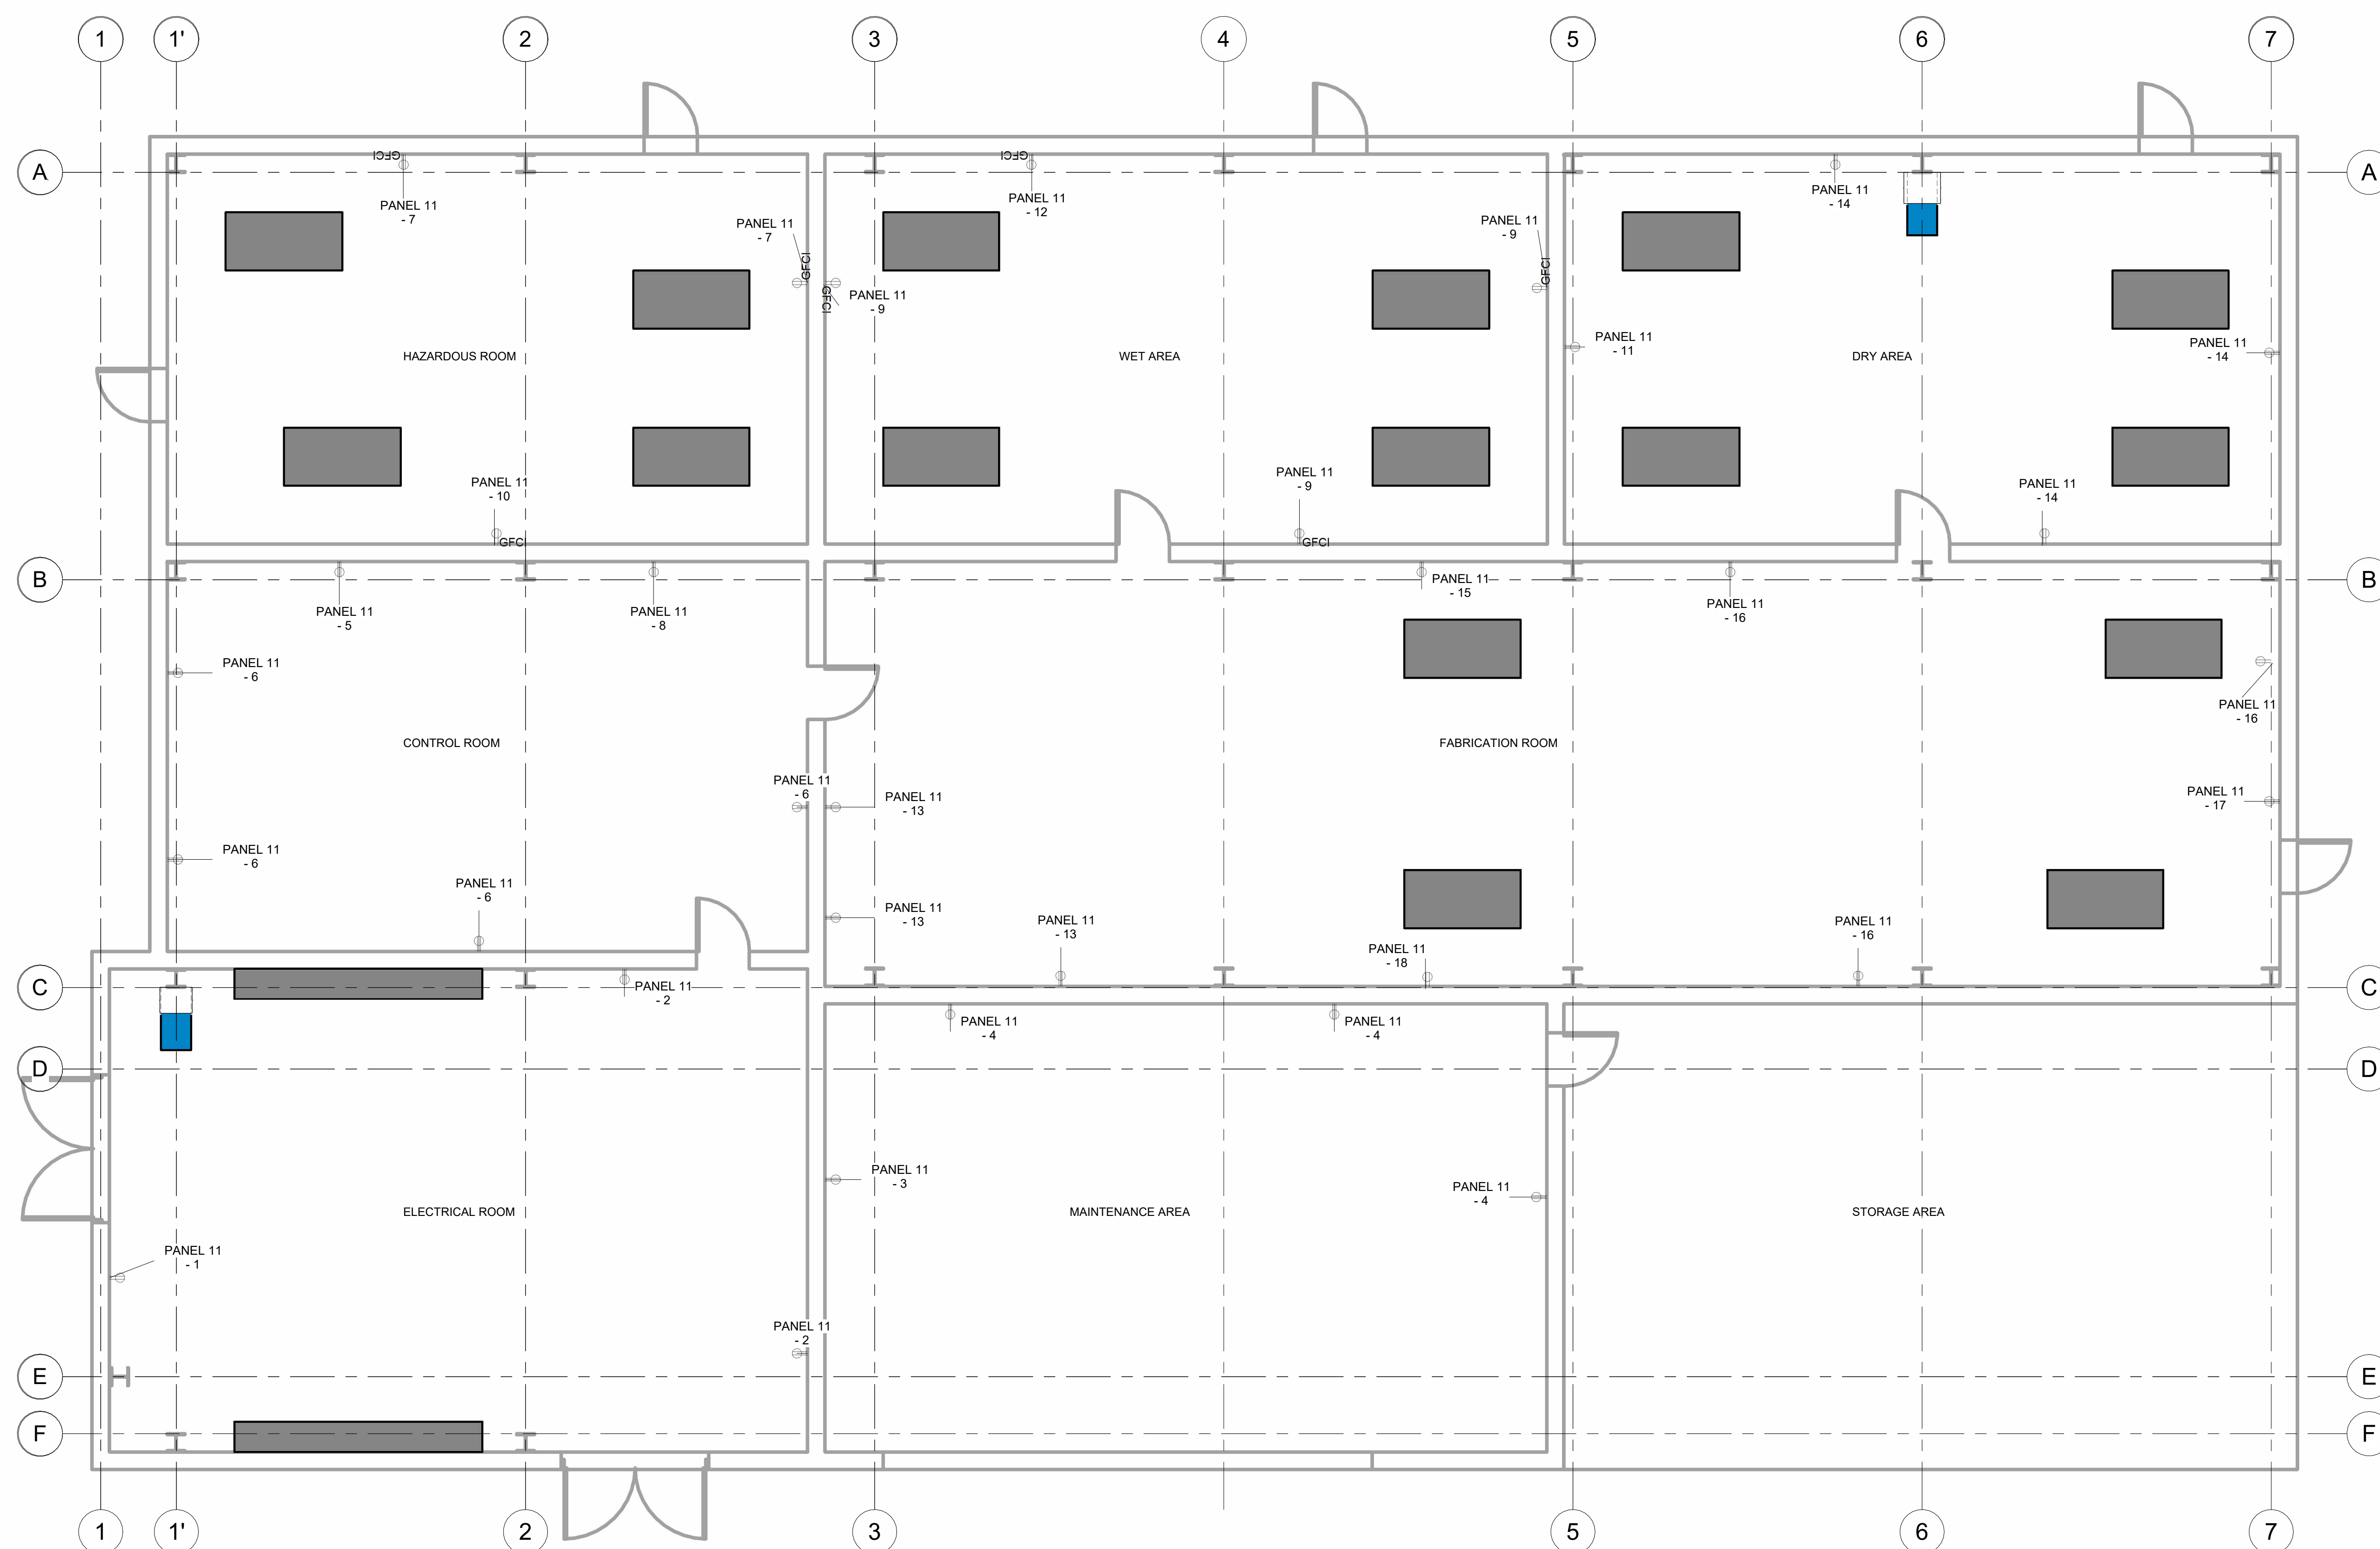

① 1 - Power  
1 : 60



[www.autodesk.com/revit](http://www.autodesk.com/revit)

DRAWING NOTES:

REFERENCE DRAWINGS:

- E-07 LEVEL 1 POWER
- E-10 REFLECTED  
CEILING PLAN

[illegible]

Tegh Manesh and  
Sons Co.

# UVs PLAYHOUSE

## PANEL SCHEDULE

|                |               |
|----------------|---------------|
| Project Number | 67            |
| Date           | 12/01/2025    |
| Drawn By       | YUVRAJ GREWAL |
| Checked By     | TEGH MANESH   |

E-08

|       |        |
|-------|--------|
| Scale | N.T.S. |
|-------|--------|

## Branch Panel: PANEL 11

Location:  
Supply From:  
Mounting: Surface  
Enclosure:

**Volts:** 120/208 Wye  
**Phases:** 3  
**Wires:** 4

**A.I.C. Rating:**  
**Mains Type:**  
**Mains Rating:**  
**MCB Rating:** 1 A

**Notes:**

| CKT                 | Circuit Description             | Trip           | Poles | A             | B       | C                | Poles  | Trip                       | Circuit Description                  | CKT |
|---------------------|---------------------------------|----------------|-------|---------------|---------|------------------|--------|----------------------------|--------------------------------------|-----|
| 1                   | Receptacle-Electrical Room-DED  | 15 A           | 1     | 180 VA        | 360 VA  |                  |        | 1                          | 15 A Receptacle-Electrical Room      | 2   |
| 3                   | Receptacle-Maintenance Area-DED | 15 A           | 1     |               | 180 VA  | 540 VA           |        | 1                          | 15 A Receptacle-Maintenance Area     | 4   |
| 5                   | Receptacle-Control Room-DED     | 15 A           | 1     |               |         | 180 VA           | 720 VA | 1                          | 15 A Receptacle-Control Room         | 6   |
| 7                   | Receptacle-Hazardous Room       | 15 A           | 1     | 360 VA        | 180 VA  |                  |        | 1                          | 15 A Receptacle-Control Room-DED     | 8   |
| 9                   | Receptacle-Wet Area             | 15 A           | 1     |               | 540 VA  | 180 VA           |        | 1                          | 15 A Receptacle-Hazardous Room-DED   | 10  |
| 11                  | Receptacle-Dry Area-DED         | 15 A           | 1     |               |         | 180 VA           | 180 VA | 1                          | 15 A Receptacle-Wet Area-DED         | 12  |
| 13                  | Receptacle-Fabrication Room     | 15 A           | 1     | 540 VA        | 540 VA  |                  |        | 1                          | 15 A Receptacle-Dry Area             | 14  |
| 15                  | Receptacle-Fabrication Room-DED | 15 A           | 1     |               | 180 VA  | 540 VA           |        | 1                          | 15 A Receptacle-Fabrication Room     | 16  |
| 17                  | Receptacle-Fabrication Room-DED | 15 A           | 1     |               |         | 180 VA           | 180 VA | 1                          | 15 A Receptacle-Fabrication Room-DED | 18  |
| 19                  |                                 |                |       |               |         |                  |        |                            |                                      | 20  |
| 21                  |                                 |                |       |               |         |                  |        |                            |                                      | 22  |
| 23                  |                                 |                |       |               |         |                  |        |                            |                                      | 24  |
| 25                  |                                 |                |       |               |         |                  |        |                            |                                      | 26  |
| 27                  |                                 |                |       |               |         |                  |        |                            |                                      | 28  |
| 29                  |                                 |                |       |               |         |                  |        |                            |                                      | 30  |
| 31                  |                                 |                |       |               |         |                  |        |                            |                                      | 32  |
| 33                  |                                 |                |       |               |         |                  |        |                            |                                      | 34  |
| 35                  |                                 |                |       |               |         |                  |        |                            |                                      | 36  |
| 37                  |                                 |                |       |               |         |                  |        |                            |                                      | 38  |
| 39                  |                                 |                |       |               |         |                  |        |                            |                                      | 40  |
| 41                  |                                 |                |       |               |         |                  |        |                            |                                      | 42  |
|                     |                                 | Total Load:    |       | 2160 VA       | 2160 VA | 1620 VA          |        |                            |                                      |     |
|                     |                                 | Total Amps:    |       | 19 A          | 19 A    | 14 A             |        |                            |                                      |     |
| Legend:             |                                 |                |       |               |         |                  |        |                            |                                      |     |
| Load Classification |                                 | Connected Load |       | Demand Factor |         | Estimated Demand |        | Panel Totals               |                                      |     |
| Receptacle          |                                 | 5940 VA        |       | 100.00%       |         | 5940 VA          |        |                            |                                      |     |
|                     |                                 |                |       |               |         |                  |        | Total Conn. Load: 5940 VA  |                                      |     |
|                     |                                 |                |       |               |         |                  |        | Total Est. Demand: 5940 VA |                                      |     |
|                     |                                 |                |       |               |         |                  |        | Total Conn.: 16 A          |                                      |     |
|                     |                                 |                |       |               |         |                  |        | Total Est. Demand: 16 A    |                                      |     |
|                     |                                 |                |       |               |         |                  |        |                            |                                      |     |
|                     |                                 |                |       |               |         |                  |        |                            |                                      |     |

## Branch Panel: PANEL 12

Location:  
Supply From:  
Mounting: Surface  
Enclosure:

**Volts:** 120/208 Wye  
**Phases:** 3  
**Wires:** 4

A.I.C. Rating:  
Mains Type:  
Mains Rating:  
MCB Rating: 1 A

**Notes:**


| CKT | Circuit Description | Trip        | Poles | A      | B      | C      | Poles | Trip | Circuit Description     | CKT |
|-----|---------------------|-------------|-------|--------|--------|--------|-------|------|-------------------------|-----|
| 3   | HAZARDOUS LOCATION  | 15 A        | 1     | 320 VA | 208 VA |        | 1     | 15 A | STORAGE AREA            | 2   |
| 4   | DRY AREA            |             |       |        |        |        | 1     | 15 A | FABRICATION ROOM - WEST | 4   |
| 5   | ELECTRICAL ROOM     | 15 A        | 1     |        | 208 VA | 208 VA | 1     | 20 A | FABRICATION ROOM - EAST | 6   |
| 7   | Space               | --          | 1     | --     | --     |        | 1     | --   | Space                   | 8   |
| 9   | CONTROL ROOM        | 15 A        | 1     |        | 210 VA | --     | 1     | --   | Space                   | 10  |
| 11  |                     |             |       |        |        |        | 1     | 15 A | WET AREA                | 12  |
| 13  |                     |             |       |        |        |        |       |      |                         | 14  |
| 15  |                     |             |       |        |        |        |       |      |                         | 16  |
| 17  |                     |             |       |        |        |        |       |      |                         | 18  |
| 19  |                     |             |       |        |        |        |       |      |                         | 20  |
| 21  |                     |             |       |        |        |        |       |      |                         | 22  |
| 23  |                     |             |       |        |        |        |       |      |                         | 24  |
| 25  |                     |             |       |        |        |        |       |      |                         | 26  |
| 27  |                     |             |       |        |        |        |       |      |                         | 28  |
| 29  |                     |             |       |        |        |        |       |      |                         | 30  |
| 31  |                     |             |       |        |        |        |       |      |                         | 32  |
| 33  |                     |             |       |        |        |        |       |      |                         | 34  |
| 35  |                     |             |       |        |        |        |       |      |                         | 36  |
| 37  |                     |             |       |        |        |        |       |      |                         | 38  |
| 39  |                     |             |       |        |        |        |       |      |                         | 40  |
| 41  |                     |             |       |        |        |        |       |      |                         | 42  |
|     |                     | Total Load: |       | 528 VA | 625 VA | 561 VA |       |      |                         |     |
|     |                     | Total Amps: |       | 4 A    | 5 A    | 5 A    |       |      |                         |     |

Legend:

| Load Classification | Connected Load | Demand Factor | Estimated Demand | Panel Totals               |
|---------------------|----------------|---------------|------------------|----------------------------|
| Other               | 320 VA         | 100.00%       | 320 VA           |                            |
| Lighting            | 1392 VA        | 100.00%       | 1392 VA          | Total Conn. Load: 1712 VA  |
|                     |                |               |                  | Total Est. Demand: 1712 VA |
|                     |                |               |                  | Total Conn.: 5 A           |
|                     |                |               |                  | Total Est. Demand: 5 A     |
|                     |                |               |                  |                            |
|                     |                |               |                  |                            |

**Notes:**

## SIDE VIEW

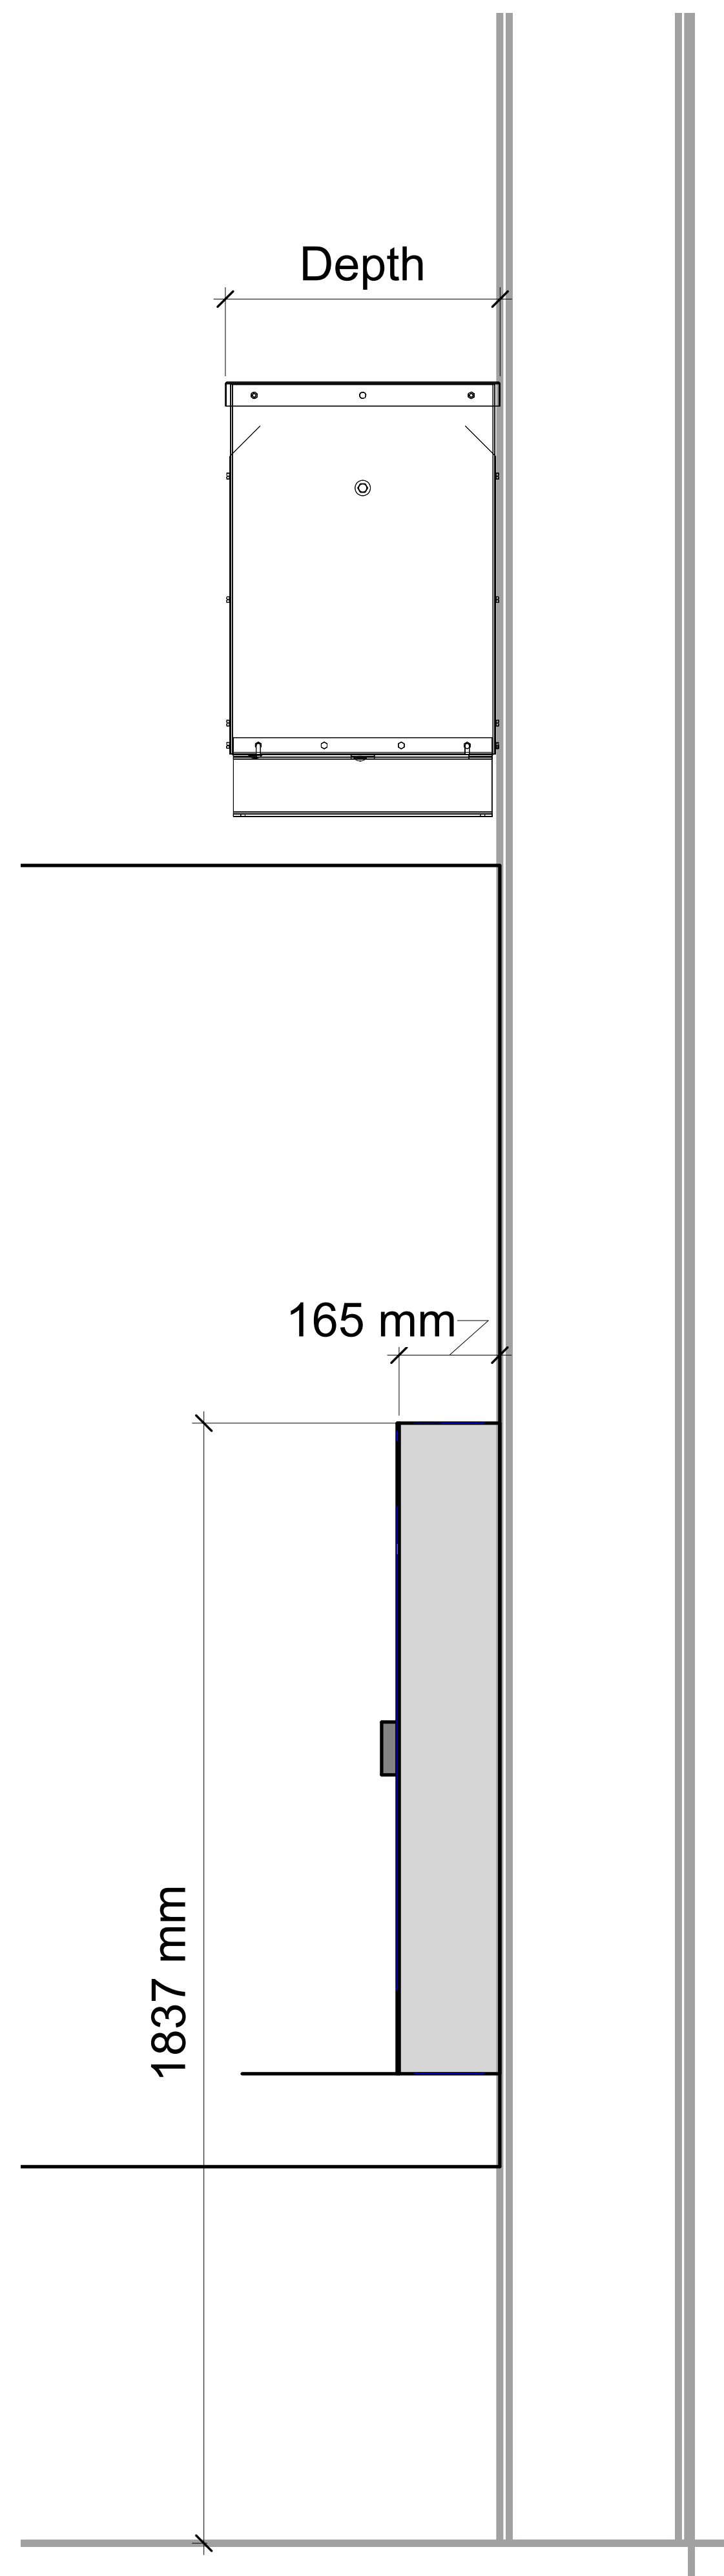

② Panel 11 Side  
1 : 8



DRAWING NOTES:

- REFERENCE DRAWINGS:

- [illegible]

UVs PLAYHOUSE

|                |               |
|----------------|---------------|
| Project Number | 67            |
| Date           | 12/01/2025    |
| Drawn By       | YUVRAJ GREWAL |
| Checked By     | TEGH MANESH   |

|       |       |
|-------|-------|
| Scale | 1 : 8 |
|-------|-------|



1. ALL LIGHTS ARE 6000K
2. ALL LIGHTS ARE LOW BAY UNLESS OTHERWISE SPECIFIED
3. CONTROL ROOM LIGHTS ARE TROFFER TYPE

- E-08 PANEL SCHEDULE

[illegible]

UVs PLAYHOUSE


REFLECTED  
CEILING PLAN

|                |               |
|----------------|---------------|
| Project Number | 67            |
| Date           | 12/01/2025    |
| Drawn By       | YUVRAJ GREWAL |
| Checked By     | TEGH MANESH   |

E-10

Scale 1 : 50

10/1/2025 5:10:11 PM

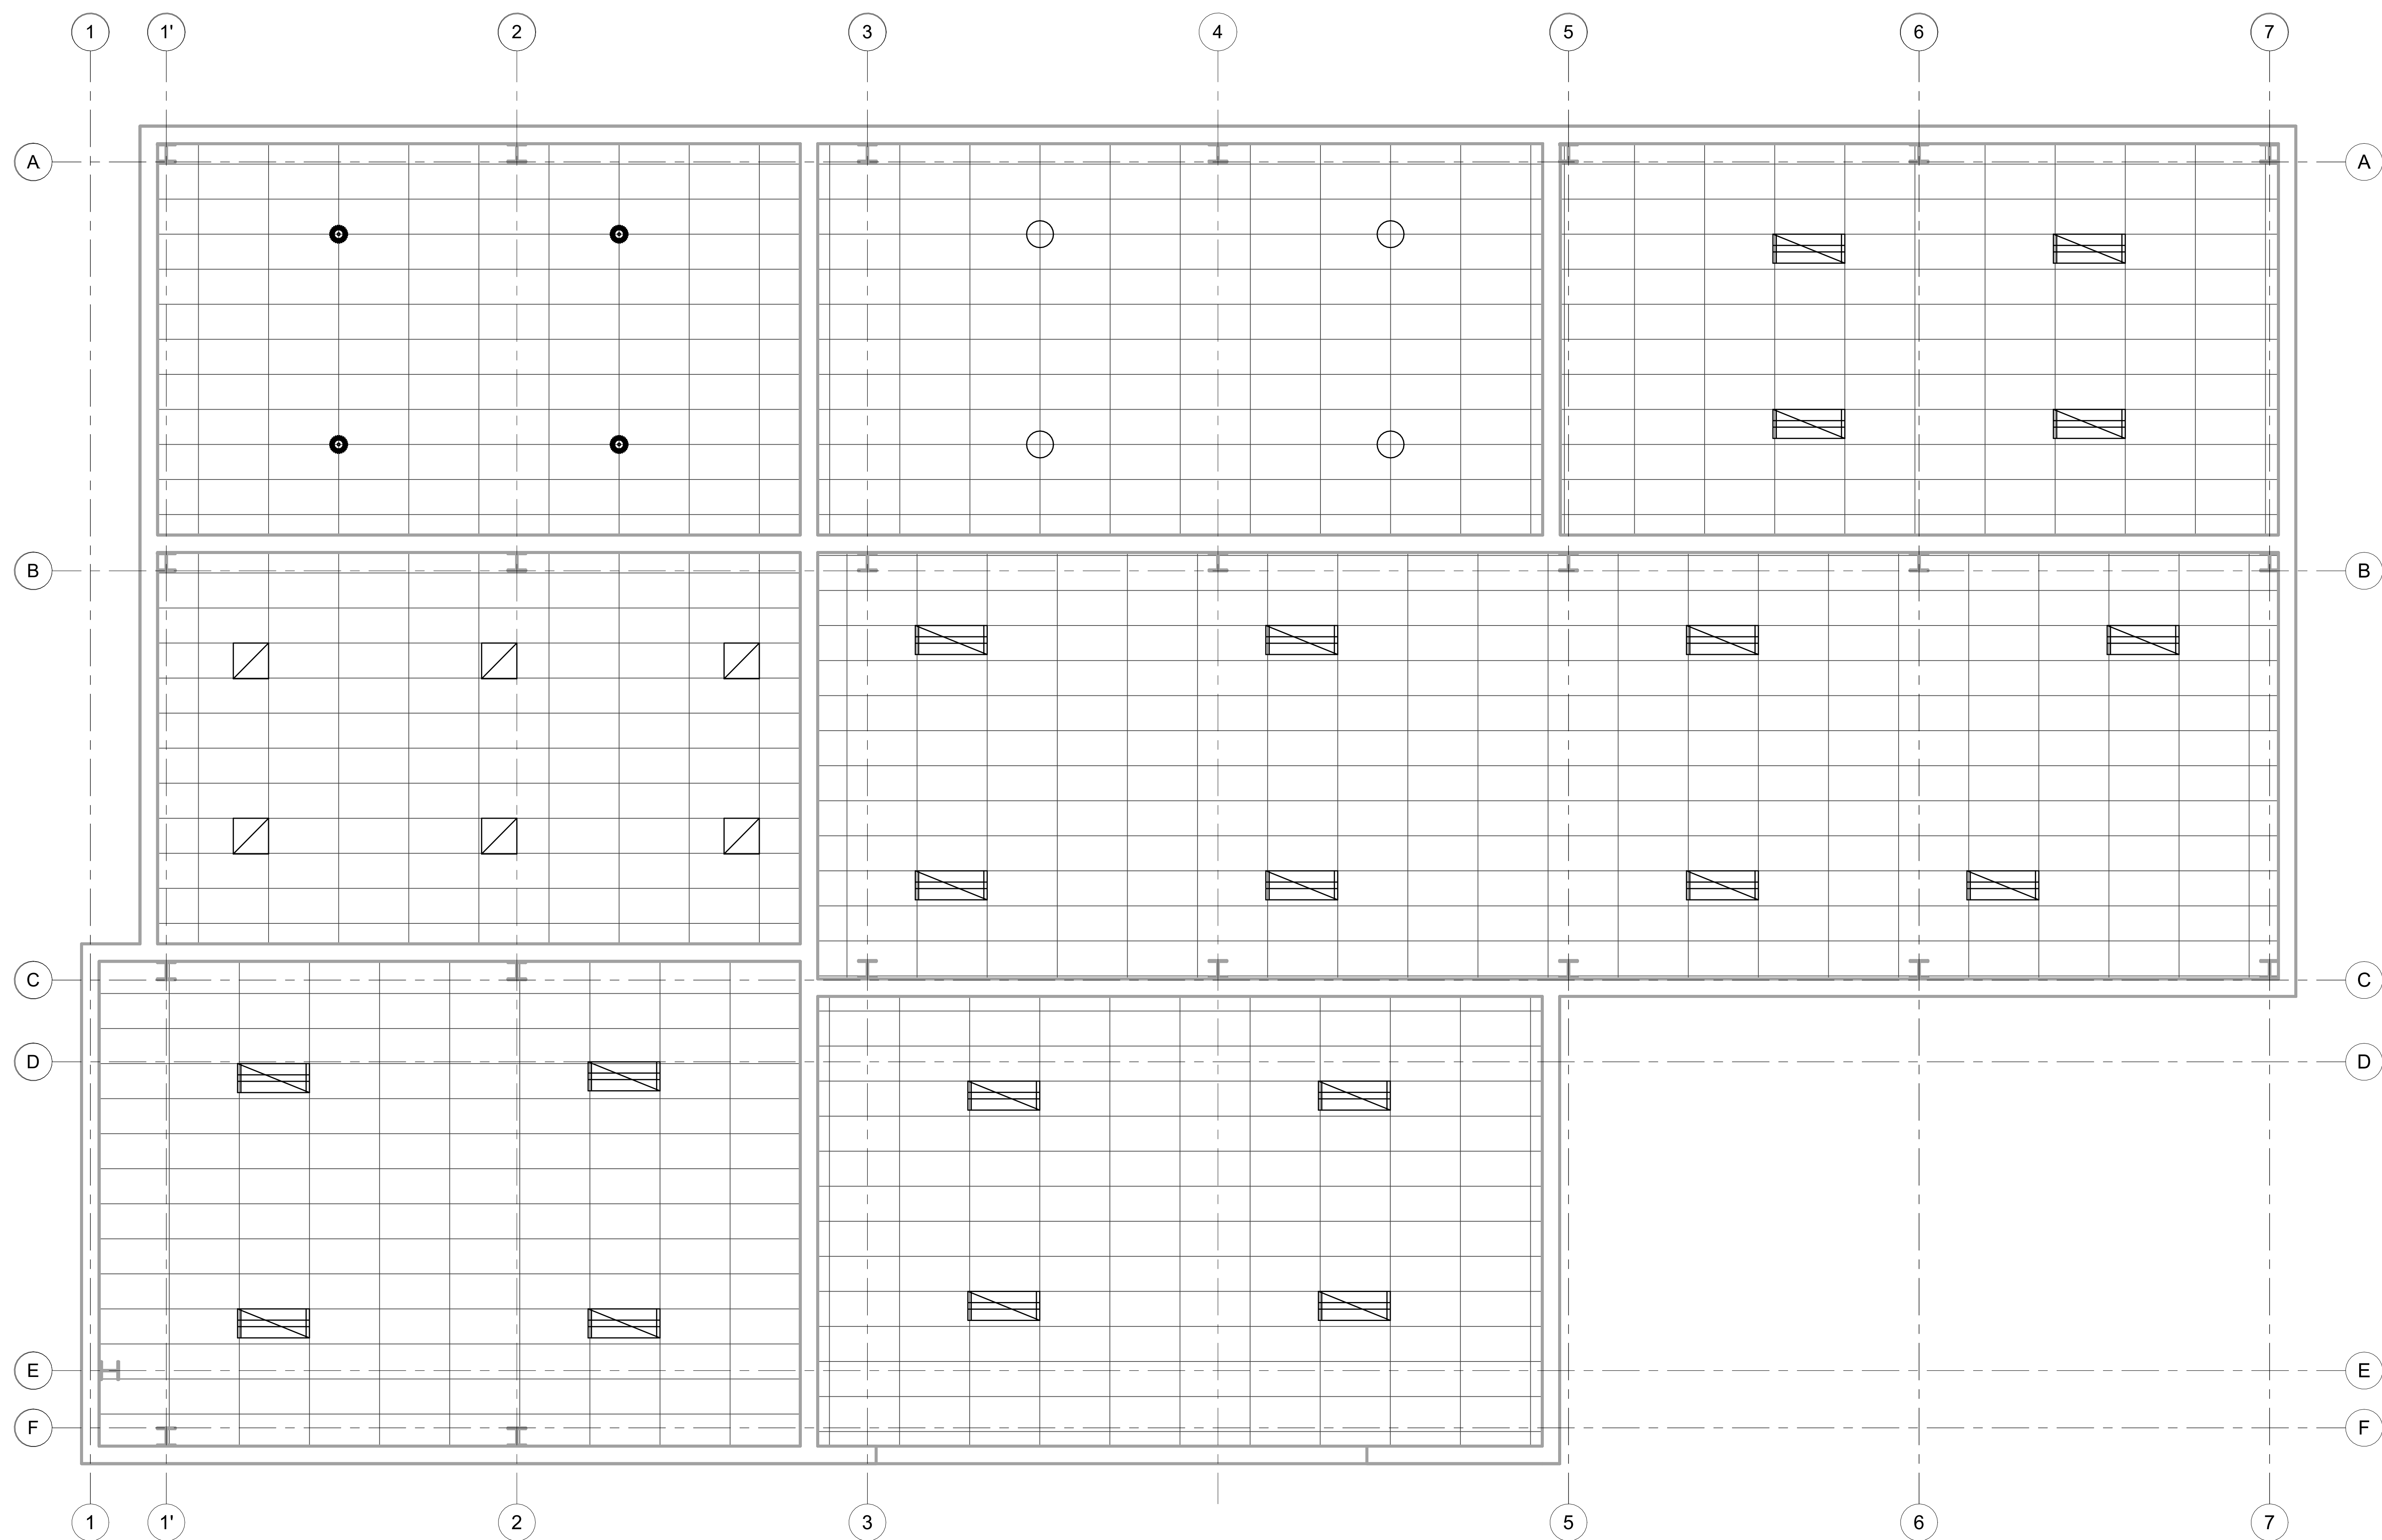

# CABLE TRAY BOM

|    | PART NO.            | ITEM DESCRIPTION               | QUANTITY |
|----|---------------------|--------------------------------|----------|
| 1  | SS4-5-12-L09-3      | LADDER TYPE CABLE TRAY         | 26       |
| 2  | SS4-5-12-L09-6      | LADDER TYPE CABLE TRAY         | 7        |
| 3  | SSF-5-12-L-HB-90-24 | HORIZONTAL BEND 12"x5"         | 2        |
| 4  | SSF-4-6-L-HB-90-24  | HORIZONTAL BEND 6"x4"          | 1        |
| 5  | SSF-5-12-L-HT-90-24 | HORIZONTAL TREE 12"x5"         | 5        |
| 6  | SSF-4-6-L-HT-90-24  | HORIZONTAL TREE 6"x4"          | 1        |
| 7  | SSF-5-12-L-HX-90-24 | HORIZONTAL CROSS 12"x5"        | 4        |
| 8  | SSF-4-6-L-HX-90-24  | HORIZONTAL CROSS 6"x4"         | 1        |
| 9  | SSF-5-12-L-VO-90-24 | VERTICAL OUTSIDE BEND 12"x5"   | 14       |
| 10 | SSF-4-6-L-VO-90-24  | VERTICAL OUTSIDE BEND 6"x4"    | 4        |
| 11 | SSW-6-ESP           | SPLICE PLATE                   | 19       |
| 12 | C TG250             | GROUNDING CLAMPS – 2 COND.     | 95       |
| 13 | GTC 23P             | GROUNDING CLAMPS – 1 COND.     | 16       |
| 14 | SSW-5-12-WPS        | WALL PENETRATION SLEEVE 12"x5" | 5        |
| 15 | SS5-12-06-L-HSR     | REDUCER                        | 1        |

| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS: <ul style="list-style-type: none"><li>CABLE TRAY LAYOUT</li><li>CABLE TRAY GROUNDING DETAIL</li></ul> | ENGINEER'S STAMP | CABLE TRAY BOM  |     |     |     |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-----|---------------------------------------------------------------------------------------------------------------------------|------------------|-----------------|-----|-----|-----|
| 0          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |                                                                                                                           |                  | DWN             | DGN | CHK | ENG |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                                           |                  | UV              | UV  | TM  | TM  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                                           |                  | DRAWING NUMBER: |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                                           |                  | E-11            |     |     |     |

# CABLE SCHEDULE

|           | AWG SIZE       | INSULATION | OUTER DIAMETER<br>(inch.) | FROM       | TO              | WEIGHT<br>(kg/m) | CALBE NO.        | FROM: CABLE GLAND | TO: CABLE GLAND |
|-----------|----------------|------------|---------------------------|------------|-----------------|------------------|------------------|-------------------|-----------------|
| PM-11A-P  | 3C-#3/0 AWG    | 1000V      | 1.3                       | MCC 1      | PM-11A          | 1.691            | 05018-19-01<br>0 | ST100-469         | ST100-469       |
| PM-12A-P  | 3C-#4 AWG      | 1000V      | 1.54                      | MCC 1      | PM-12A          | 2.371            | 05018-27-01<br>0 | ST150-472         | ST150-472       |
| PM-13A-P  | 3C-#250 KCMILL | 1000V      | 2.17                      | MCC 1      | PM-13A          | 5.655            | 05020-03-01<br>0 | ST200-474         | ST200-474       |
| PM-14A-P  | 3C-#3/0 AWG    | 1000V      | 1.87                      | MCC 1      | PM-14A          | 3.967            | 05019-11-01<br>0 | ST150-472         | ST150-472       |
| PM-15A-P  | 3C-#4 AWG      | 1000V      | 1.25                      | MCC 1      | PM-15A          | 1.444            | 05018-15-01<br>0 | ST100-469         | ST100-469       |
| PM-16A-P  | 3C-#1 AWG      | 1000V      | 1.54                      | MCC 1      | PM-16A          | 2.371            | 05018-27-01<br>0 | ST125-550         | ST125-550       |
| PM-17A-P  | 3C-#1 AWG      | 1000V      | 1.54                      | MCC 1      | PM-17A          | 2.371            | 05018-27-01<br>0 | ST125-550         | STX150-550      |
| PM-18A-P  | 3C-#3 AWG      | 1000V      | 1.3                       | MCC 1      | PM-18A          | 1.691            | 05018-19-01<br>0 | ST100-469         | STX125-469      |
| TX-11-P   | 3C-#8 AWG      | 1000V      | 1.13                      | MCC 1      | TX-11 PRI.      | 1.078            | 05018-11-01<br>0 | ST075-468         | ST075-468       |
| TX-11-S   | 4C-#6 AWG      | 1000V      | 1.13                      | TX-11 SEC. | PANEL 11        | 1.35             | 05018-12-01<br>0 | ST100-469         | ST100-469       |
| TX-12-P   | 3C-#1/0 AWG    | 1000V      | 1.177                     | MCC 1      | TX-12 PRI.      | 2.837            | 05019-03-01<br>0 | ST125-471         | ST125-471       |
| TX-12-S   | 4C-#2/0 AWG    | 1000V      | 1.177                     | TX-12 SEC. | PANEL 12        | 4.085            | 05019-08-01<br>0 | ST150-473         | ST150-473       |
| HVAC-11-P | 3C-#3 AWG      | 1000V      | 1.3                       | MCC 1      | HVAC UNIT<br>11 | 1.691            | 05018-11-01<br>0 | ST100-469         | ST100-469       |

| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS:<br><ul style="list-style-type: none"><li>MCC1 SINGLE LINE DIAGRAM</li></ul> | ENGINEER'S STAMP | CABLE SCHEDULE  |     |     |     |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-----|-------------------------------------------------------------------------------------------------|------------------|-----------------|-----|-----|-----|
| 0          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |                                                                                                 |                  | DWN             | DGN | CHK | ENG |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | UV              | UV  | TM  | TM  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | DRAWING NUMBER: |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | E-12            |     |     |     |

| Motor<br>or Load<br>Designation | Starting<br>Method | Control<br>Method | HP<br>or④<br>kVA | Enclosure | Location          | S.F. | Rated<br>Voltage | Insulation<br>Class | Motor<br>Start<br>Code | Distance<br>to Load<br>(Meters) | Conductor<br>AWG or<br>KCMIL | Comments                  |
|---------------------------------|--------------------|-------------------|------------------|-----------|-------------------|------|------------------|---------------------|------------------------|---------------------------------|------------------------------|---------------------------|
| PM-11A                          | ESS                | Hand/Off/<br>Auto | 30               | TEFC      |                   | 1.15 | 460              | B                   | H                      | 51                              | #3/0 AWG                     |                           |
| PM-12A                          | ESS                | Hand/Off/<br>Auto | 50               | TEFC      |                   | 1.14 | 460              | B                   | H                      | 51                              | #4 AWG                       | See Note 1                |
| PM-13A                          | VFD                | Hand/Off/<br>Auto | 75               | TEFC      |                   | 1.12 | 460              | B                   | H                      | 54                              | #250 KCMILL                  | See Note 1                |
| PM-14A                          | VFD                | Hand/Off/<br>Auto | 60               | TEFC      |                   | 1.19 | 460              | B                   | H                      | 54                              | #3/0 AWG                     |                           |
| PM-15A                          | FVNR               | Hand/Off/<br>Auto | 25               | TEFC      |                   | ?    | 460              | B                   | J                      | 43                              | #4 AWG                       |                           |
| PM-16A                          | FVNR               | Hand/Off/<br>Auto | 50               | TEFC      |                   | 1.16 | 460              | B                   | H                      | 43                              | #1 AWG                       | 30 Minute<br>Intermittent |
| PM-17A                          | FVNR               | Hand/Off/<br>Auto | 40               | TEFC      | Class 1<br>Zone 2 | 1.18 | 460              | B                   | J                      | 62                              | #1 AWG                       |                           |
| PM-18A                          | FVNR               | Hand/Off/<br>Auto | 30               | TEFC      | Class 1<br>Zone 2 | 1.1  | 460              | B                   | H                      | 61                              | #3 AWG                       |                           |
| Transformer<br>XMR 11②          |                    |                   | 15               | IP 54     |                   |      | 480-<br>120/208  |                     |                        | 7                               | #8 AWG                       |                           |
| Transformer<br>XMR 12③          |                    |                   | 45               | IP 54     |                   |      | 480-<br>120/208  |                     |                        | 56                              | #1/0 AWG                     |                           |
| HVAC Unit 11                    |                    | BCS               |                  |           |                   |      | 460              |                     |                        | 26                              | #3 AWG                       | 25 Ton Unit               |

**DESIGN NOTES:**

- ① Requires a Bypass Contactor c/w manual Control Circuit for a Full Voltage start in an Emergency situation
- ② Transformer XMR 11 and Panel LP 11 co-located on one I beam
- ③ Transformer XMR 12 and Panel LP 12 co-located on one I beam
- ④ Values are in kVA for designated transformer loads.

| REV<br>NUM | DATE     | REVISION DESCRIPTION   | DWN | DGN | CHK | ENG | REV<br>NUM | DATE | REVISION DESCRIPTION | DWN | DGN | CHK | ENG | REFERENCE DRAWINGS:<br><ul style="list-style-type: none"><li>MCC1 SINGLE LINE DIAGRAM</li></ul> | ENGINEER'S STAMP | MCC SCHEDULE MCC1 |     |     |     |
|------------|----------|------------------------|-----|-----|-----|-----|------------|------|----------------------|-----|-----|-----|-----|-------------------------------------------------------------------------------------------------|------------------|-------------------|-----|-----|-----|
| 0          | 12/01/25 | ISSUED FOR IFC PACKAGE | UV  | UV  | TM  | TM  |            |      |                      |     |     |     |     |                                                                                                 |                  | DWN               | DGN | CHK | ENG |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | UV                | UV  | TM  | TM  |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | DRAWING NUMBER:   |     |     |     |
|            |          |                        |     |     |     |     |            |      |                      |     |     |     |     |                                                                                                 |                  | E-13              |     |     |     |